

## Datasheet

### Polarized Retroreflective Laser Sensors



- Visible class 1 laser with small, effective beam size
- Excellent optical performance throughout sensing range, even close up
- Easy push-button SET options: Maximum Excess Gain or Low-Contrast SET, depending on model, plus Manual Adjust
- Easy-to-read operating status indicators, with 8-segment bar graph display
- Bipolar discrete outputs, PNP and NPN
- Selectable 30 millisecond OFF-delay
- Models available with 2 m or 9 m (6.5 ft or 30 ft) cable or integral quick-disconnect
- Tough ABS housing rated IEC IP67; NEMA 6
- Compact housing, mounting versatility – popular 30 mm threaded nose or side-mount

Excellent for applications where high sensing power and small beam size are important. Operates over sensing ranges typically accomplished only by conventional opposed-mode photoelectrics; uses a special filter to polarize the emitted light, filtering out unwanted reflections from shiny objects.



#### WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

## Models

Model	Range and Use	Spot Size at Focus	Cable <sup>1</sup>	Supply	Output Type
QS30LLP	0.2 m to 18 m (0.67 ft to 60 ft) Maximum Excess Gain SET for Long-Range Applications	Approx. 4 mm at 10 m (0.16 in at 33 ft)	2 m (6.5 ft) 5-wire Cable	10 V dc to 30 V dc	Bipolar NPN / PNP
QS30LLPQ			Integral 5-pin Euro-style QD		
QS30LLPC	0.2 m to 18 m (0.67 ft to 60 ft) Low-Contrast SET for Small Object Detection		2 m (6.5 ft) 5-wire Cable		
QS30LLPCQ			Integral 5-pin Euro-style QD		

## Overview

QS30LLP and QS30LLPC Series sensors are easy-to-use, high-performance laser sensors whose many configuration options make them suitable for demanding applications. Each sensor features two identically configured outputs, one each NPN and PNP.

The compact housing has a large, easy-to-see bar graph display plus bright LEDs for easy configuration and status monitoring during operation. The sensor can be side-mounted, using integral mounting holes, or front-mounted, via the 30 mm threaded barrel.

MODEL QS30LLP(Q) is configured using the Maximum Excess Gain SET procedure. It is useful for long-range applications and high variations in contrast, such as beam-break applications where the target objects are larger than the beam. See [Maximum Excess Gain SET - Model QS30LLP](#) on page 4 for more information.

<sup>1</sup> To order the 9 m (30 ft) cable models, add the suffix "W/30" to the model number of any cabled sensor (for example, QS30LLP W/30). A model with a QD connector requires a mating cable.



MODEL QS30LLPC(Q) is configured using the Low-Contrast SET procedure. It is useful for small object detection and other applications with small variations in contrast, such as yarn- or thread-break applications. See [Low-Contrast SET - Model QS30LLPC](#) on page 5 for more information.

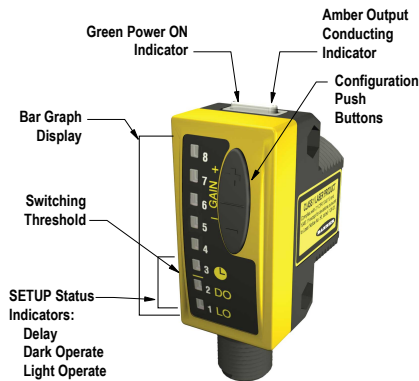


Figure 1. Model QS30LLP Features



Figure 2. Model QS30LLPC Features

## Description of Laser Classes

### Class 1 Lasers


Class 1 lasers are lasers that are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

Reference IEC 60825-1:2001, Section 8.2.



#### CAUTION: Do Not Disassemble for Repair

This device contains no user-serviceable components. Do not attempt to disassemble for repair. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. A defective unit must be returned to the manufacturer.

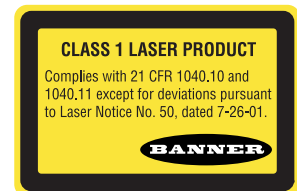

For Safe Laser Use (Class 1 or Class 2):

- Do not stare at the laser.
- Do not point the laser at a person's eye.
- Mount open laser beam paths either above or below eye level, where practical.
- Terminate the beam emitted by the laser product at the end of its useful path.

## Device Setup

### Installation Notes

Conventional retroreflective photoelectric sensors are extremely easy to align. Beam angles are wide, and retro targets are forgiving to the light beam's angle of incidence. The beam of this laser sensor is very narrow, compared with the beam of most retro sensors. As Figure 6 indicates, the effect of angular misalignment can be dramatic. Alignment is critical because the beam may miss the retroreflective target unless the target is large.

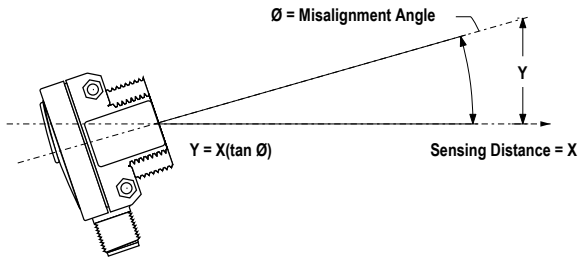


Figure 3. Beam Displacement per degree of misalignment

Sensor-to-Target Distance (X)	Beam Displacement (Y) for 1° of Misalignment
1.5 m (5 ft)	25 mm (1 in)
3 m (10 ft)	50 mm (2 in)
6 m (20 ft)	100 mm (4 in)
15 m (50 ft)	250 mm (10 in)
30 m (100 ft)	500 mm (20 in)

For example, with one BRT-51X51BM mounted at a distance of 6 m (20 ft) from the sensor, one degree of angular misalignment will cause the center of the laser beam to miss the center of the target by 100 mm (4 in).

**Alignment Tip**

When using a small retroreflective target at medium or long range, it is often useful to temporarily attach (or suspend) a strip of retroreflective tape (for example, BRT-TVHG-2X2) along a line that intersects the actual target. The visible red laser beam is easily seen in normal room lighting on such tape. Sight along the beam toward the target (from behind the sensor). Move the sensor to scan the laser beam back and forth across the retro tape strip. Use the tape strip to guide the beam onto the target.

Consider using sensor mounting bracket model SMB30SC (see [Brackets](#) on page 11). This swivel bracket can simplify multiple-axis alignment. Alignment is complete when the visible image is centered on the retro target. The perpendicularity of the laser beam to the face of the retro target is forgiving, just as it is with a conventional retroreflective sensor.

**Effective Beam Size**

Unlike conventional retroreflective sensors, the retroreflective laser has the ability to sense relatively small profiles. Figure 7 indicates the diameter of the smallest opaque rod which will reliably break the laser beam at several sensor-to-object distances using sensor model QS30LLP(Q). These minimum object sizes were measured with the sensor aligned to a BRT-51X51BM reflector and the gain set to maximum using the Max Excess Gain SET. This sensor is typically recommended for long-range applications of relatively small targets that will completely break the beam.

Sensor-to-Object Distance (X)	Minimum Object Detection Size
0.3 m (1 ft)	2.5 mm (0.10 in)
1.5 m (5 ft)	5.0 mm (0.20 in)
3 m (10 ft)	7.0 mm (0.28 in)
18 m (59 ft)	13 mm (0.52 in)

Figure 4. Minimum object detection size vs. distance from sensor, model QS30LLP(Q)


Smaller objects can be detected by using model QS30LLPC(Q), adjusting the sensor gain down using the Manual Adjust, or performing a Low-Contrast SET of the reflector. Objects as small as 2.0 mm can be reliably detected after performing the Low-Contrast SET at ranges up to 6 m (18 ft). This sensor is typically recommended for shorter-range applications detecting very small targets that may break only a portion of the beam.

Note that the shape of the beam is elliptical. The minimum object sizes listed assume passage of the rod across the major diameter of the ellipse (worst case). It may be possible to detect objects smaller than the sizes listed if the direction in which the objects pass through the beam can be controlled.

**Retroreflector Recommendations**

- BRT-51X51BM recommended for beam-block applications up to 18 m range.
- BRT-TVHG-2X2 recommended for applications up to 2 m range. (This retroreflector is an adhesive-backed sealed tape with micro-prism geometry.)

## Wiring Diagrams

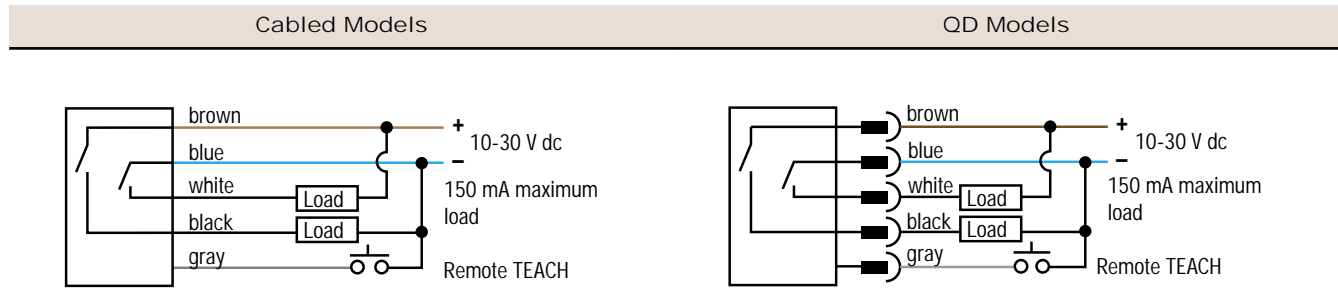

Note: The pink wire is not used.

## Sensor Configuration


Configure the sensor using the SET and SETUP modes. After SET mode has defined the sensing parameters, use SETUP mode to add an OFF-delay or change the light/dark operate status. Use Manual Adjust to fine-tune the thresholds. Use the two push buttons, "+" and "-", to access and set sensing parameters. The remote wire also may be used for some procedures.

## Remote Configuration

Use the Remote Configuration function to set the sensor threshold remotely or to disable the push buttons for security. Connect the gray wire of the sensor to ground (0 V dc), with a remote programming switch connected between them. Pulse the remote line according to the diagrams in the programming procedures. The length of the individual programming pulses is equal to the value T:  $0.04 \text{ seconds} \leq T \leq 0.8 \text{ seconds}$ .

## Push Button Disable

In addition to its programming function, Remote Programming may be used to disable the push buttons for security. Disabling the push buttons prevents undesired tampering with the programming settings. Connect the gray wire of the sensor as described and four-pulse to enable or disable the push buttons.



## Maximum Excess Gain SET - Model QS30LLP

- Sets the sensor for maximum excess gain without allowing false proxing. Provides maximum contrast between any reflector and a blocked condition and is stable even in dirty environments.
- Useful for long-range applications and high variations in contrast, such as beam-break applications where the target objects are larger than the beam.

Sensor can be aimed at an object or the reflector during SET process to obtain the same result. All conditions darker than the switchpoint condition result in ON output (Dark Operate). Output ON and OFF conditions can be reversed by changing Light/Dark Operate in SETUP mode (factory setting: Dark Operate).

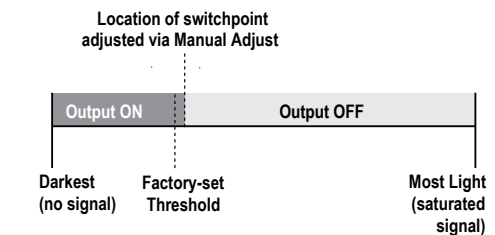


Figure 5. Maximum Excess Gain SET (Dark Operate shown)

### Manual Adjust – Maximum Excess Gain SET




During RUN mode, adjusts switchpoint up or down via "+" or "-" push buttons.

- Each push button "click" adjusts the switchpoint up by approximately 0.5X excess gain or down by the same increments.
- The lighted bar graph LEDs move to reflect the increase or decrease of excess gain relative to the switchpoint.
- LEDs #7 and 8 flash when maximum gain is achieved; LEDs #1 and 2 flash when minimum gain is achieved.

When the received signal is at any level greater than 6X excess gain, the first "-" (minus) click to reduce excess gain reduces it to the 6X level. Subsequent "-" clicks result in decreased values as shown in [Specifications](#) on page 8 (approximately 2 clicks per LED change). To return to maximum excess gain, either press "+" repeatedly until LEDs #7 and 8 flash, or hold the "+" button for longer than 2 seconds. For example, in an application that results in 20X excess

gain, pressing “-” once lowers the gain to 6X, exhibited by LED #8 ON. Pressing it twice more results in approximately 5X excess gain, exhibited by LED #7 ON. Holding the “+” button for 2 seconds results in a return to maximum gain (20X), exhibited by LEDs #7 and 8 flashing.

Set the Switchpoint

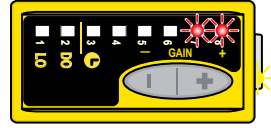Method	Action	Result
Push Button	Press and hold “+” > 2 seconds	 Green Power LED: OFF Amber Output LED: ON Bar graph: #7 & 8 flashing <ul style="list-style-type: none"> <li>• Sensor returns to RUN mode with new settings</li> <li>• Use Manual Adjust to increase or decrease sensor excess gain</li> </ul>
Remote Input <sup>2</sup>	Single-pulse the remote input.	 

Low-Contrast SET - Model QS30LLPC

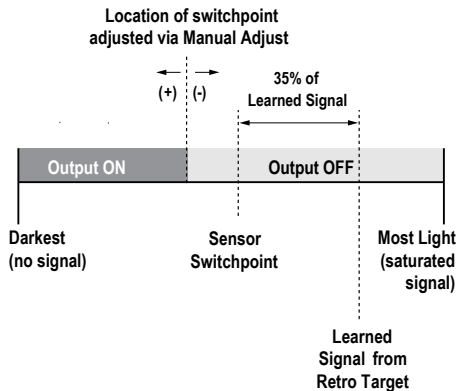


Figure 6. Low-Contrast SET (Dark Operate shown)

- Sets a switchpoint at 35 percent below the signal from the retroreflector.
- Useful for small object detection and other applications with small variations in contrast, such as yarn- or thread-break applications.
- Sensor must be aimed at the reflector during the SET process. All conditions darker than the switchpoint condition result in ON output (Dark Operate). Output ON and OFF conditions can be reversed by changing Light/Dark Operate in SETUP mode (factory setting: Dark Operate).

Manual Adjust – Low-Contrast SET




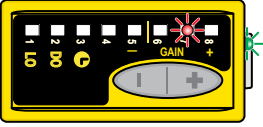
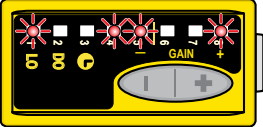
During RUN mode, adjusts switchpoint up or down via “+” or “-” push buttons.

- Each push button “click” adjusts the switchpoint up by 5 percent of the signal from the reflector or down by the same increments.
- The lighted bar graph LEDs move to reflect the increase or decrease in excess gain.
- LEDs #7 and 8 flash when maximum gain is achieved; LEDs #1 and 2 flash when minimum gain is achieved.

If the target object does not cause the output to change state, press the “-” button to decrease the gain, making the sensor more sensitive to small signal changes.

<sup>2</sup> 0.04 seconds ≤ T ≤ 0.8 seconds

Set Switchpoint

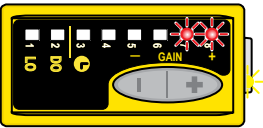Method	Action	Result
Push Button	<p>a. Align sensor to the reflector.</p> <p>b. Press and hold "+" &gt; 2 seconds.</p> 	<p>Green Power LED: OFF</p> <p>Amber Output LED: ON</p>  <p>Switchpoint Accepted</p> <p>Bar graph: #7 and 8 flash for 2 sec</p> <p>Amber Power LED: OFF</p> <p>Green Power LED: ON</p> <p>Bar graph: Appropriate LED ON</p> <ul style="list-style-type: none"> <li>• Sensor returns to RUN mode with new settings</li> <li>• Use Manual Adjust to increase or decrease sensor sensitivity</li> </ul>
Remote Input <sup>3</sup>	<p>a. Align sensor to the reflector.</p> <p>b. Single-pulse remote line.</p> 	 <p>Switchpoint Not Accepted</p> <p>Bar graph: #1, 4, 5, and 8 flash for 2 sec</p> <p>Green Power LED: ON</p> <ul style="list-style-type: none"> <li>• Sensor returns to RUN mode without saving (maintains previous settings)</li> </ul> 

SETUP Mode

SETUP mode is accomplished via the sensor's two push buttons. It is used to change sensor output response for:

- Light or Dark Operate
- 30-millisecond pulse stretcher (OFF-delay), if required.

The status LEDs, active only during SETUP mode, indicate the output response configuration when the sensor will be in RUN mode.








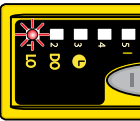
Figure 7. SETUP Mode

1. Access SETUP Mode.


<sup>3</sup> 0.04 seconds ≤ T ≤ 0.8 seconds

Method	Action	Result
Push Button <sup>4</sup>	Press and hold both push buttons > 2 seconds	Green Power LED turns OFF 

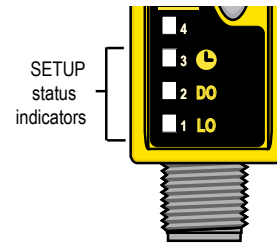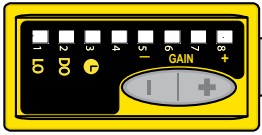2. Select SETUP Options.

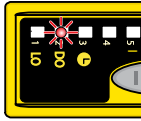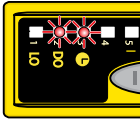Method	Action	Result
Push Button	Click either push button to toggle through the four possible setting combinations.	<div style="display: flex; flex-wrap: wrap;"> <div style="width: 50%;"> <p>DO, No Delay</p>  </div> <div style="width: 50%;"> <p>DO 30 ms Delay</p>  </div> <div style="width: 50%;"> <p>LO, 30 ms Delay</p>  </div> <div style="width: 50%;"> <p>LO, No Delay</p>  </div> </div>

3. Return to RUN Mode.

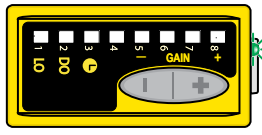Method	Action	Result
Push Button	Press and hold both push buttons > 2 seconds.	Green Power LED turns ON 

<sup>4</sup> 0.04 seconds ≤ T ≤ 0.8 seconds

# Specifications

## Supply Voltage and Current

10 V dc to 30 V dc (10% maximum ripple at 10% duty cycle) at 35 mA maximum current, exclusive of load

## Sensing Beam

Visible red LED, 650 nm

## Laser Classification

Class 1

## Beam Size at Aperture

Approximately 3 mm

## Supply Protection Circuitry

Protected against reverse polarity, overvoltage, and transient voltages

## Delay at Power-Up

1 second maximum; outputs do not conduct during this time

## Output Configuration

Solid-state bipolar (SPDT): 1 current sourcing (PNP) and 1 current sinking (NPN)

## Output Rating

150 mA maximum load

Off-state leakage current: < 10 µA at 30 V dc

ON-state saturation voltage:

NPN: less than 1.0 V at 150 mA load

PNP: less than 2.0 V at 150 mA load

## Output Protection Circuitry

Protected against output short-circuit, continuous overload, transient overvoltages, and false pulse on power-up

## Output Response

500 microseconds

## Repeatability

70 microseconds

## Required Overcurrent Protection



**WARNING:** Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to [www.bannerengineering.com](http://www.bannerengineering.com).

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

## Adjustments

2 push buttons and remote wire

Easy push-button configuration

Manually adjust (+/-) thresholds (push buttons only)

LO/DO and OFF-delay configuration options

Push-buttons lockout (from remote wire only)

## Factory Defaults:

No Delay

Dark Operate

Push buttons enabled

## Indicators

Green LED: Power ON

Amber LED: Output conducting

8-Segment Red Bar Graph

SETUP mode:

LED 3 (clock): Flashes Red when delay is selected

LED 2 (DO): Flashes Red when Dark Operate is selected

LED 1 (LO): Flashes Red when Light Operate is selected

RUN mode: Signal Strength (excess gain), relative to switchpoint

Model QS30LLP	Model QS30LLPC
LED 8: >6X	LED 8: >2X
LED 7: 5-6X	LED 7: 1.5-2X
LED 6: 4-5X	LED 6: 1-1.5X
LED 5: 3-4X	LED 5: 0.8X
LED 4: 2-3X	LED 4: 0.6X
LED 3: 1-2X	LED 3: 0.4X
LED 2: 0.5-1X	LED 2: 0.2X
LED 1: 0-0.5X	LED 1: 0X

Sensor calibration failure: Alternating even-numbered and odd-numbered LEDs flash

## Construction

ABS housing, acrylic lens cover

## Environmental Rating

IEC IP67; NEMA 6

## Connections

5-conductor 2 m (6.5 ft) PVC cable, 9 m (30 ft) PVC cable, or 5-pin integral M12/Euro-style male quick-disconnect fitting

## Operating Conditions

-10 °C to +50 °C (+14 °F to +122 °F)

95% at +50 °C maximum relative humidity (non-condensing)

## Vibration and Mechanical Shock


All models meet Mil Std. 202F requirements. Method 201A (vibration: 10 Hz to 60 Hz max., double amplitude 0.06 inch, maximum acceleration 10G). Also meets IEC 947-5-2 requirements: 30G 11 ms duration, half sine wave.

## Certifications






## Dimensions

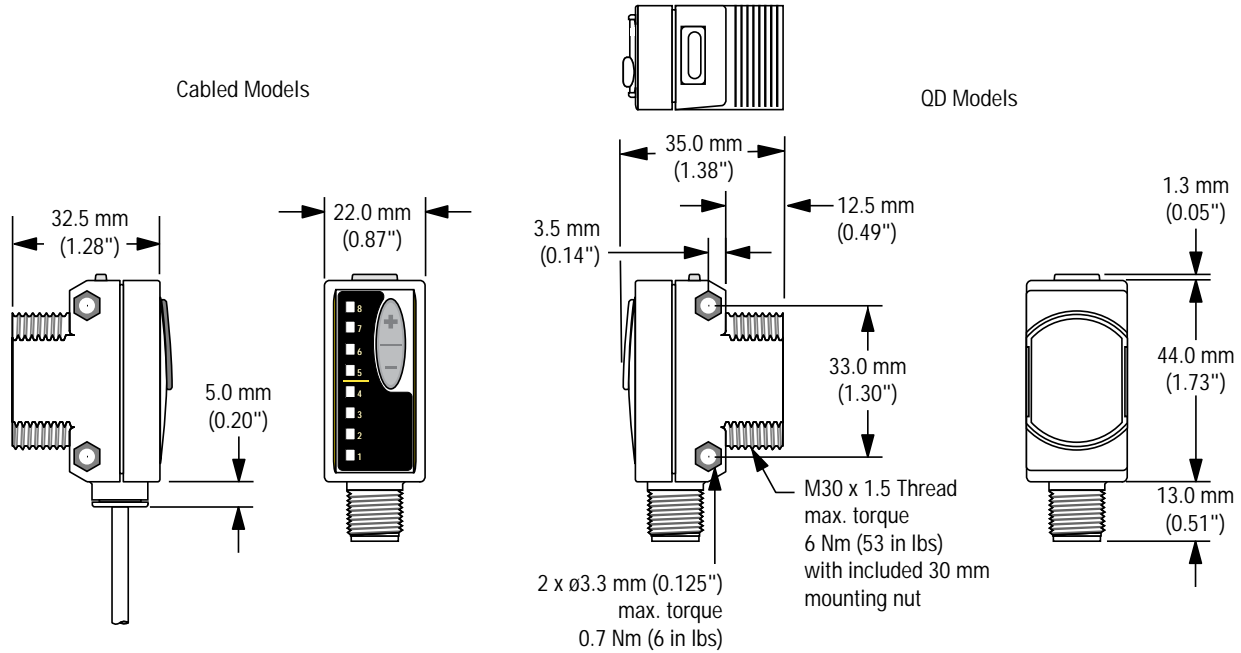

Hardware Included: (2) M3 x 0.5 x 28 stainless steel machine screws, nuts, and washers

## Excess Gain

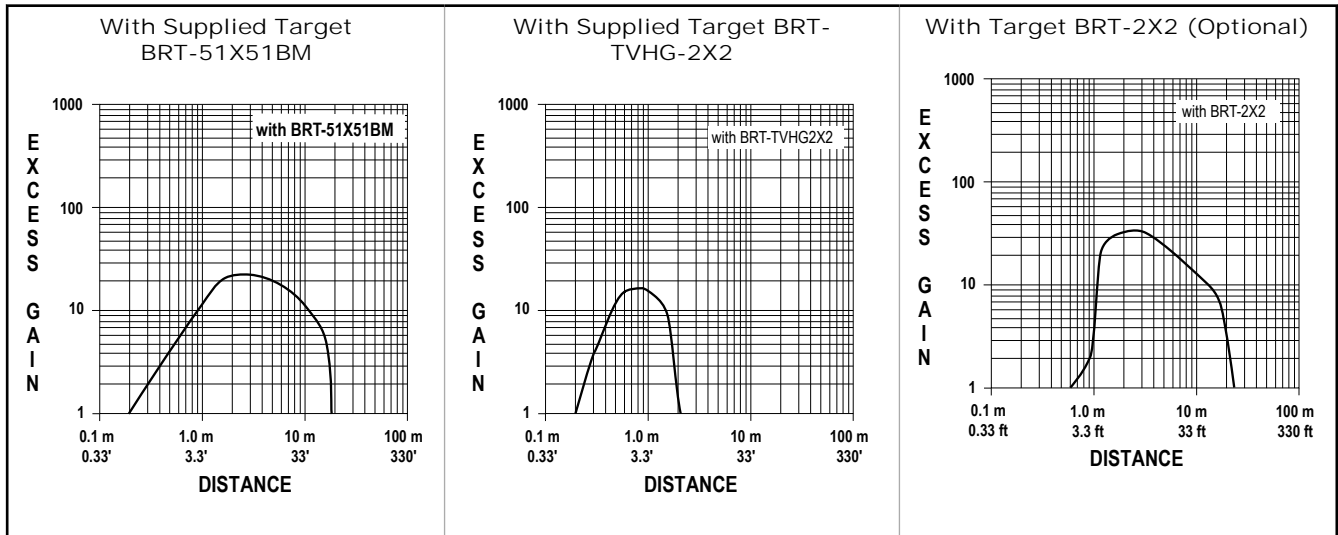

## Accessories

### Quick-Disconnect Cables

5-Pin Threaded M12/Euro-Style Cordsets—Single Ended				
Model	Length	Style	Dimensions	Pinout (Female)
MQDC1-501.5	0.50 m (1.5 ft)	Straight		<p>1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray</p>
MQDC1-506	1.83 m (6 ft)			
MQDC1-515	4.57 m (15 ft)			
MQDC1-530	9.14 m (30 ft)			
MQDC1-506RA	1.83 m (6 ft)	Right-Angle		
MQDC1-515RA	4.57 m (15 ft)			
MQDC1-530RA	9.14 m (30 ft)			


### Retroreflective Targets



**NOTE:** Polarized sensors require corner cube type retroreflective targets only.


#### BRT-2X2

- Square, acrylic target
- Reflectivity factor: 1.0
- Max. temperature: +50 °C (+122 °F)
- Optional brackets are available
- Approximate size: 51 mm × 51 mm

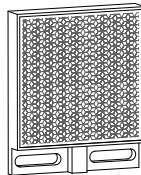

#### BRT-51X51BM

- Square, acrylic target
- Reflectivity Factor: 1.5
- Temperature: -20 °C to +50 °C (-4 °F to +122 °F)
- Micro-prism geometry
- Optional brackets are available
- Approximate size: 51 mm × 51 mm

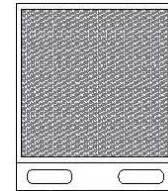


### Retroreflective Tape

Model	Reflectivity Factor	Maximum Temperature	Size
BRT-TVHG-2X2	0.8	+60 °C (+140 °F)	50 × 50 mm

## Brackets

### SMB30SC


- Swivel bracket with 30 mm mounting hole for sensor
- Black reinforced thermoplastic polyester
- Stainless steel mounting and swivel locking hardware included

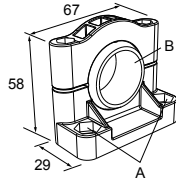

Hole center spacing: A=ø 50.8  
Hole size: A=ø 7.0, B=ø 30.0

### SMBQS30L

- Right-angle bracket for cable sensor models
- Clearance for M4 (#8) hardware
- ± 12° tilt adjustment
- 14-ga. stainless steel

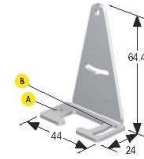

Hole center spacing: A to B=35.0  
Hole size: A=ø 4.3, B=ø 4.25x16.3

### SMBQS30LT


- Tall right-angle bracket for QD models
- ± 8° tilt adjustment
- 14-ga. stainless steel



Hole center spacing: A to B=35.0  
Hole size: A=ø 4.3, B=ø 4.25x16.3

### SMBQS30Y


- Heavy-duty die-cast bracket
- M18 vertical mount option
- ± 8° tilt adjustment with cabled units
- Includes nuts and lock washer

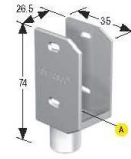

Hole size: A=ø 15.3

### SMB30MM


- 12-ga. stainless steel bracket with curved mounting slots for versatile orientation
- Clearance for M6 (¼ in) hardware
- Mounting hole for 30 mm sensor

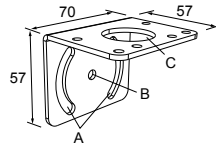

Hole center spacing: A = 51, A to B = 25.4  
Hole size: A = 42.6 x 7, B = ø 6.4, C = ø 30.1

### SMB30A

- Right-angle bracket with curved slot for versatile orientation
- Clearance for M6 (¼ in) hardware
- Mounting hole for 30 mm sensor
- 12-ga. stainless steel

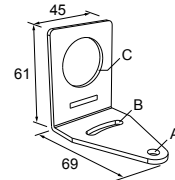

Hole center spacing: A to B=40  
Hole size: A=ø 6.3, B= 27.1 x 6.3, C=ø 30.5

All measurements are listed in millimeters, unless noted otherwise.

## Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: [www.bannerengineering.com](http://www.bannerengineering.com).