


Shunt Meter For DC Current Measurement

Easy to Use. Easy to Read.



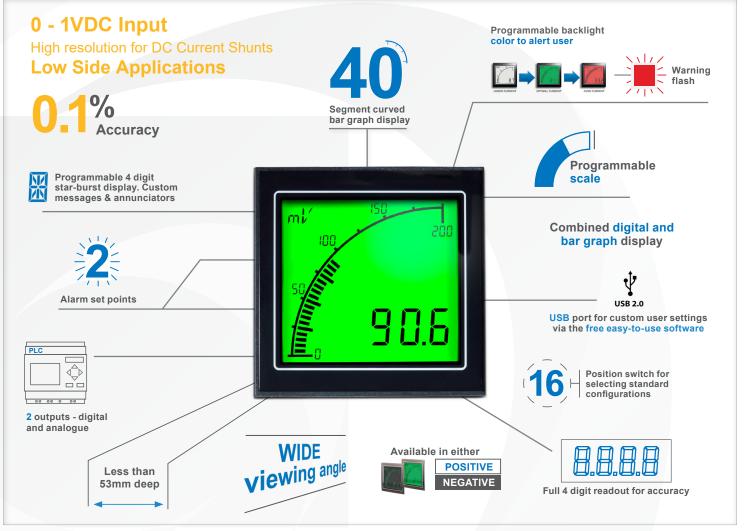

Featuring an acclaimed easy-to-read display and a high resolution input, the Shunt Meter takes the APM into a wide range of new applications, where accurate DC current measurement is required.

The APM Shunt Meter is ideal for DC current measurement applications in marine, leisure, material handling, and industrial applications such as power supplies, load banks and charging systems.

The programmable scale and custom annunciators mean users can tailor the meter to display their critical parameters exactly how they want. Dynamic backlighting, in conjunction with setpoints, means operators are visually alerted when a parameter is out of range. The two outputs can be used to connect the APM to other systems in the process, meaning the APM Shunt Meter is much more than just a display.

Go to www.trumeter.com/apm for further information





Key Features

Large multi-format display that incorporates:

- 40 segment bar graph display
- · Large 4-digit display
- Separate Starburst display area for annunciators, custom messages and alarm information
- · Dynamic backlight color

Programmable:

INPUT

Range

Impedance

Accuracy (0-200mV)

ENVIRONMENTAL Temperature - operating

Temperature - storage

IP rating (from the front)

POWER SUPPLY

Nominal Input

Number of digits

Backlight colors

DISPLAY

Digit height

LCD display

OUTPUTS

Max voltage

Max current

Analog output CERTIFICATION

NEMA rating (from the front)

Number of message characters


Accuracy (201-1000mV)

- Display Range (Both Min & Max Values)
- · Custom annunciators
- · User-selectable backlight color and intensity
- Two independent alarm set-points
- Two independent outputs
- 4-20mA analog monitor output

Visibility:

- · User-adjustable backlight brightness and color
- · Large display
- · Wide viewing angle (horizontal and vertical)
- Custom annunciators


Dimensions:



Panel cutout: 68mm x 68mm [2.68" x 2.68"] as per DIN43700/IEC61554

Easy To Use Software

Just plug into any USB port on your PC, run the freely available APM Configurator application and you're off. No drivers required.

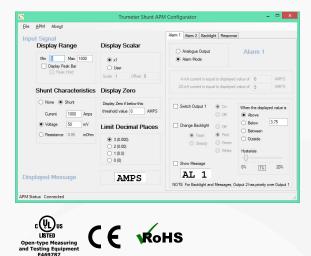

Part Numbers:

APM-SHUNT-APO APM-SHUNT-ANO APM SHUNT METER, POSITIVE LCD, WITH OUTPUTS APM SHUNT METER, NEGATIVE LCD, WITH OUTPUTS By Request: Modbus connectivity APM-CT-APS APM CT ME APM-CT-ANS APM CT ME

APM CT METER, POSITIVE LCD WITH MODBUS APM CT METER, NEGATIVE LCD WITH MODBUS

022128-01

USB Cable

Full specifications available online www.trumeter.com/apm



Trumeter (Europe) Pilot Mill

Alfred Street Bury, BL9 9EF Tel: +44 161 674 0960 Email: sales.uk@trumeter.com

Frumeter (The Americas

702 S. Military Trail Deerfield Beach, Florida FL 33442, USA Tel: +1 954 725 6699 Email: sales.usa@trumeter.com

Innovative Design Technologies Sdn. Bhd Lot 5881, Lorong Iks Bukit Minyak 1 Taman Perindustrian Iks, 14000 Bukit Tengah Penang, Malaysia Web: www.idtworld.com Tel: + 604 5015700 Email: sales.my@idtworld.com

0 - 1 VDC 1 Meg 0.1% of signal or 0.5mV, whichever is greater 0.2% of full scale

VOLTAGE

-10 to +60°C

-40 to +70°C

IP65

Type 4 & Type 12

12-24 VDC

4

12mm [0.47"]

4

Red, Green, White

Positive or Negative

34V

500mA

4-20mA

UL, cUL, CE