

Conforming to OSHA Standard Pressure Relief 3 Port Valve with Locking Holes VHS20/30/40/50, VHS2510/3510/4510/5510 Series

Single Action

Double Action

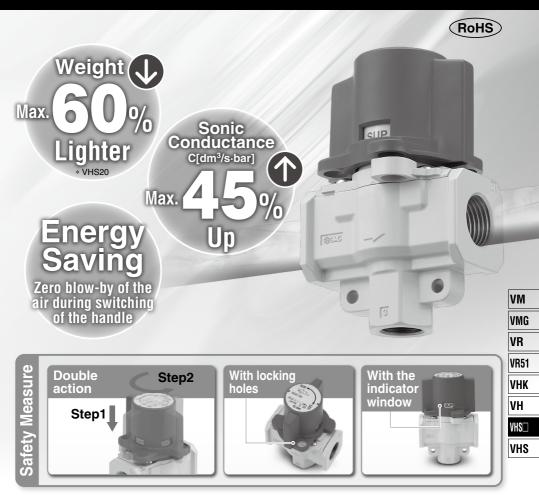

Combination with a (modular type) F.R.L. is possible.



Single Action VHS20/30/40/50 Series Double Action VHS2510/3510/4510/5510 Series



Safety Measure

Can prevent accidents caused by inadvertent air supply problems.

Step1

Push down

the handle

With the indicator window



The supply/exhaust status of the air flow can be verified at a glance in the indicator window.

SUP : Supply EXH : Exhaust

Double action

Push the handle and then turn, **2-step** action prevents malfunction.

Step2

Turn the

handle






When in the exhaust position, the valve may be padlock secured. Prevents accidental start-ups while personnel are cleaning or servicing equipment.

OSHA standard (Occupational Safety and Health Administration Department of Labor) For safety control, OSHA rule requires energy sources for certain equipment be turned off or disconnected and that the device either be locked or labelled with a warning tag. * Recommended lock shackle diameter size: ø5 or more

Shackle diameter



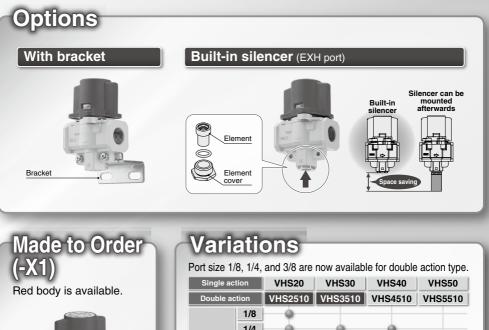




Single act	Single action		VHS30	VHS40	VHS50		
Double ac	tion	VHS2510	VHS3510	VHS4510	VHS5510		
	1/8	•					
	1/4	- •	•	•			
Port size	3/8		•	•			
(Rc, NPT, G)	1/2			•			
	3/4			•	•		
	1				•		
(Semi-standard) — Handle: Black Flow direction: Right \rightarrow Left							
	on) e to Orde			silencer (EXH po	ort)		
(1110		body. I					





Conforming to OSHA Standard Pressure Relief 3 Port Valve with Locking Holes (Single Action) VHS20/30/40/50 Series

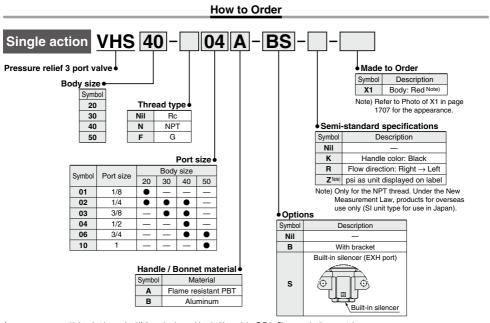

A spacer or spacer with bracket is required if the valve is combined with modular F.R.L. Please order it separately. VHS type can be ordered from How to Order of modular F.R.L. combination.

Pressure relief 3 port valve	Spacer part no.	Spacer with bracket part no.	Applicable air preparation equipment
VHS20	Y200-A	Y200T-A	AC20-A, B
VHS30	Y300-A	Y300T-A	AC25-A, B, AC30-A, B
VHS40	Y400-A	Y400T-A	AC40-A, B
VHS40-06	Y500-A	Y500T-A	AC40-06-A, B
VHS50	Y600-A	Y600T-A	AC50-B, AC55-B, AC60-B

* New VHS series compatible with old spacer Y200 (T) to Y600 (T).



∕⊘SMC

Conforming to OSHA Standard Pressure Relief 3 Port Valve with Locking Holes (Single Action) VHS20/30/40/50 Series



Symbol



OSHA standard (Occupational Safety and Health Administration Department of Labor)

For safety control, OSHA rule requires energy sources for certain equipment be turned off or disconnected and that the device either be locked or labelled with a warning tag.

Specifications


Standard specifications

otui	otandara specifications									
Model		VHS20	VHS30	VHS40	VHS40-06	VHS50				
Fluic	1	Air								
Amb	ient and fluid temperature		-5 to	60°C (No fre	ezing)					
Proo	f pressure			1.5 MPa						
Oper	rating pressure range	0.1 to 1.0 MPa								
Hand	lle switching angle			90°						
Pain	t color (Standard)	Handle: Red Body: White								
Wainht	A (Handle, bonnet: Flame resistant PBT)	76 g	127 g	247 g	293 g	532 g				
Weight	B (Handle, bonnet: Aluminum)	92 g	156 g	301 g	349 g	630 g				

Flow rate characteristics


	Port	size		Flow rate characteristics								
Model	IN. OUT	EXH	IN-	→OUT		OUT	Г→ЕХН					
	111, 001		C(dm3/s.bar)	b	Cv	C(dm3/s.bar)	b	Cv				
VHS20	1/8	1/8	2.4	0.43	0.65	2.5	0.39	0.69				
VH520	1/4	1/0	3.3	0.40	0.88	3.1	0.51	0.84				
VHS30	1/4	1/4	6.4	0.45	1.7	6.2	0.38	1.7				
VH530	3/8	1/4	8.3	0.41	2.3	7.0	0.41	1.9				
	1/4		7.3	0.49	2.0	8.5	0.35	2.3				
VHS40	3/8	3/8	10.9	0.45	3.0	11.6	0.40	3.1				
	1/2		14.2	0.39	3.8	13.3	0.43	3.6				
VHS40-06	3/4	1/2	18.3	0.31	5.0	17.7	0.37	4.8				
VHS50	3/4	1/2	23.8	0.41	6.4	21.8	0.41	5.9				
1350	1	1/2	31.9	0.33	8.6	23.5	0.44	6.4				

Construction

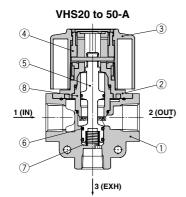

VHS20 to 50-B

Built-in silencer (Option)





Component Parts

No.	Description	Mate	ərial	Note		
INO.	Description	VHS20 to 50-A	HS20 to 50-A VHS20 to 50-B			
1	Body	ADO	C12	White		
2	Bonnet	Flame resistant PBT (UL-94 Standard V-0 equivalent)	ADC12	White		
3	Handle	Flame resistant PBT (UL-94 Standard V-0 equivalent)	ADC12	Red		
4	Cam ring	PC	M	—		
5	Spool	PE	зт	—		
6	Spool O-ring	H-N	—			
7	Spool spring	Stainles	—			
8	Sleeve	PC	M	_		

Option Part No.

Model	Bracket assembly part no. Note 1)	Silencer assembly part no. Note 2)
VHS20	VHS20PW-180AS	VHS20PW-190AS
VHS30	VHS30PW-180AS	VHS30PW-190AS
VHS40	VHS40PW-180AS	VHS40PW-190AS
VHS40-06	VHS40PW-180-06AS	VHS40PW-190-06AS
VHS50	VHS50PW-180AS	VHS50PW-190AS

Note 1) Bracket/1pc., mounting screw/2pcs.


Note 2) Element ①, element O-ring ⑫, element cover ③ 1pc. for each.

* The VHS series cannot be disassembled. No repair parts available.



VHS20/30/40/50 Series

Dimensions

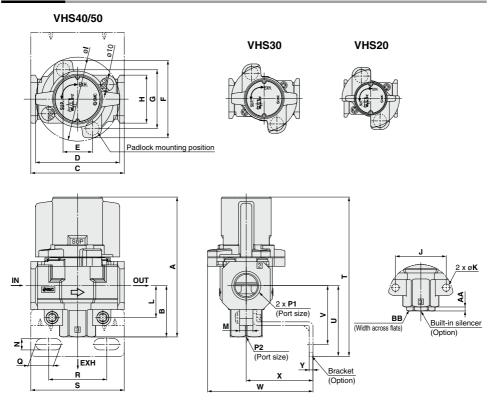

Dimensions


		Standard specifications														
Model	P1	P2		в	•	D	Е		F		G H	l .	J	к	L	м
	P1	F2	A		C		-	A type B type	u	'						
VHS20	1/8, 1/4	1/8	66.4	22.3	40	37.5	14	46.6	47.2	33.6	28	43	24	4.5	14.8	9
VHS30	1/4, 3/8	1/4	80.3	29.4	53	49	19	5	2	38	30	49	30	4.5	19	9
VHS40	1/4, 3/8, 1/2	3/8	104.9	38.5	70	63	22	5	8	44	36	63	38	5.5	24	10
VHS40-06	3/4	1/2	110.4	42	75	63	22	5	8	44	44	63	43	5.5	26	10
VHS50	3/4, 1	1/2	134.3	53	90	76	26	7	6	61	53	81	50	6.5	31	12

		Options specifications											
Model		With bracket									Built-in silencer		
	N	NQRSTUVWXYAA BI									BB		
VHS20	5.4	8.4	27	40	75.4	31.3	25.3	53.3	30	2.3	3	12	
VHS30	6.5	10	36.5	53	90.9	40	33	67	41	2.3	3	14	
VHS40	8.5	19	43.5	70	119.4	53	44	79	50	2.8	3	19	
VHS40-06	8.5	19	43.5	70	123.4	55	46	79	50	2.8	4	22	
VHS50	11	27.5	49.5	90	152.3	71	60	108	70	3.2	4	22	



Conforming to OSHA Standard Pressure Relief 3 Port Valve with Locking Holes (Double Action) VHS2510/3510/4510/5510 Series

(RoHS)

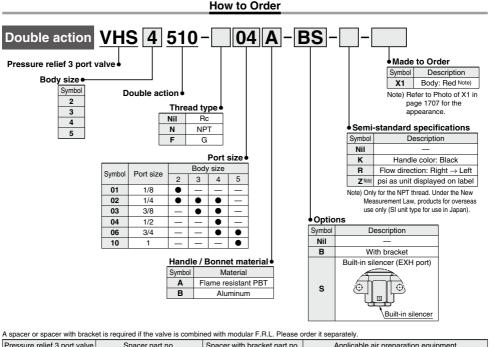

Pressure relief 3 port valve	Spacer part no.	Spacer with bracket part no.	Applicable air preparation equipment	
VHS2510	Y200-A	Y200T-A	AC20-A, B	VHS□
VHS3510	Y300-A	Y300T-A	AC25-A, B, AC30-A, B	
VHS4510	Y400-A	Y400T-A	AC40-A, B	VHS
VHS4510-06	Y500-A	Y500T-A	AC40-06-A, B	
VHS5510	Y600-A	Y600T-A	AC50-B, AC55-B, AC60-B	

* New VHS series compatible with old spacer Y200 (T) to Y600 (T).



1711

VM

VMG

VR

VR51

VHK

VH

VHS2510/3510/4510/5510 Series



Symbol



OSHA standard (Occupational Safety and Health Administration Department of Labor)

For safety control, OSHA rule requires energy sources for certain equipment be turned off or disconnected and that the device either be locked or labelled with a warning tag.

Specifications

Standard specifications

otandara opeometatione										
Model		VHS2510	VHS3510	VHS4510	VHS4510-06	VHS5510				
Fluic	1	Air								
Amb	ient and fluid temperature		-5 to	60°C (No fre	ezing)					
Proo	f pressure			1.5 MPa						
Oper	rating pressure range	0.1 to 1.0 MPa								
Hand	lle switching angle			90°						
Pain	t color (Standard)	Handle: Red Body: White								
Weight	A (Handle, bonnet: Flame resistant PBT)	77 g	129 g	250 g	296 g	536 g				
weight	B (Handle, bonnet: Aluminum)	93 g	158 g	304 g	352 g	635 g				

Flow rate characteristics

	Port	size		Flo	w rate ch	aracteristics		
Model	IN. OUT	EXH	IN-	→OUT		OU ⁻	T→EXH	
	IN, 001	LVII	C(dm3/s.bar)	b	Cv	C(dm3/s.bar)	b	Cv
VHS2510	1/8	1/8	2.4	0.43	0.65	2.5	0.39	0.69
VH52510	1/4	1/0	3.3	0.40	0.88	3.1	0.51	0.84
VHS3510	1/4	1/4	6.4	0.45	1.7	6.2	0.38	1.7
VH53510	3/8	1/4	8.3	0.41	2.3	7.0	0.41	1.9
	1/4		7.3	0.49	2.0	8.5	0.35	2.3
VHS4510	3/8	3/8	10.9	0.45	3.0	11.6	0.40	3.1
	1/2		14.2	0.39	3.8	13.3	0.43	3.6
VHS4510-06	3/4	1/2	18.3	0.31	5.0	17.7	0.37	4.8
VHS5510	3/4	1/2	23.8	0.41	6.4	21.8	0.41	5.9
VH55510	1	1/2	31.9	0.33	8.6	23.5	0.44	6.4

Construction

VHS2510 to 5510-A

VHS2510 to 5510-B

Built-in silencer (Option)



Cross section of EXH port

3 (EXH)

Option Part No.

Model	Bracket assembly part no. Note 1)	Bracket assembly part no. Note 2)
VHS2510	VHS20PW-180AS	VHS20PW-190AS
VHS3510	VHS30PW-180AS	VHS30PW-190AS
VHS4510	VHS40PW-180AS	VHS40PW-190AS
VHS4510-06	VHS40PW-180-06AS	VHS40PW-190-06AS
VHS5510	VHS50PW-180AS	VHS50PW-190AS

Note 1) Bracket/1pc., mounting screw/2pcs.

Note 2) Element (1), element O-ring (2), element cover (3) 1pc. for each.

Component Parts


No.	Description	Mat	Note		
INO.		VHS2510 to 5510-A	VHS2510 to 5510-B	NOLE	
1	Body	AD	White		
2	Bonnet	Flame resistant PBT (UL-94 Standard V-0 equivalent) ADC12		White	
3	Handle	Flame resistant PBT (UL-94 Standard V-0 equivalent) ADC12		Red	
4	Cam ring	PC	-		
5	Spool	PE	-		
6	Spool O-ring	H-N			
7	Spool spring	Stainle			
8	Sleeve	PC			

* The VHS series cannot be disassembled. No repair parts available.



Conforming to OSHA Standard VHS2510/3510/4510/5510 Series Pressure Relief 3 Port Valve with Locking Holes (Double Action)

Dimensions

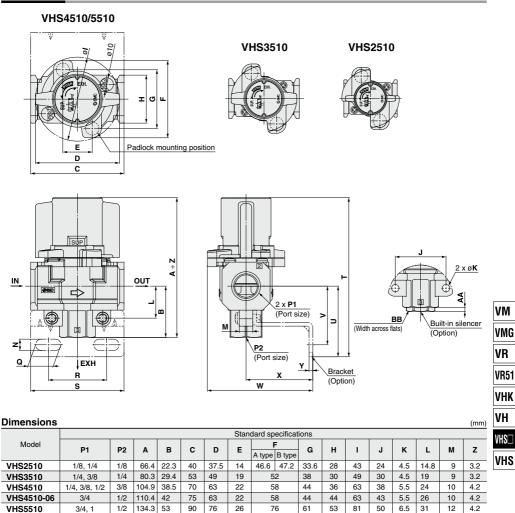

	Options specifications											
Model	With bracket									Built-in silencer		
	N	Q	R	S	т	U	v	w	X	Y	AA	BB
VHS2510	5.4	8.4	27	40	75.4	31.3	25.3	53.3	30	2.3	3	12
VHS3510	6.5	10	36.5	53	90.9	40	33	67	41	2.3	3	14
VHS4510	8.5	19	43.5	70	119.4	53	44	79	50	2.8	3	19
VHS4510-06	8.5	19	43.5	70	123.4	55	46	79	50	2.8	4	22
VHS5510	11	27.5	49.5	90	152.3	71	60	108	70	3.2	4	22

SMC



VHS20/30/40/50 Series VHS2510/3510/4510/5510 Series Specific Product Precautions 1

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

Precautions on Design

MWarning

- 1. Please consult with SMC in cases where the ambient environment does not permit leakage or if fluid other than air is used.
- 2. Do not apply negative pressure. It may result in malfunction.
- 3. Do not supply air pressure from ports other than the 1 (P) port.

The valve will malfunction when air pressure is supplied from other ports.

4. We recommend using a lock with a shackle diameter of Ø5 or more. If a lock with a shackle diameter of less than Ø5 is to be used, please test it on the actual machine.

Selection

MWarning

1. In some cases, mineral oil grease used for internal parts and sealant may be carried to the output side.

Please contact SMC if this causes any inconvenience in use.

Installation and Adjustment

MWarning

1. Confirm the symbols "1" and "2" before the valve is connected. The port marked "1" is the air inlet and the port marked "2" is the outlet.

Pressurization is only possible via the inlet port (1). Reverse connection may cause malfunction. The port symbols and corresponding piping types are shown in the table below.

Port symbol	Piping type
1	Inlet
2	Outlet
3	Exhaust

≜Caution

- 1. The valve must be switched to each position instantly and securely. Stopping the knob between the extreme positions may cause malfunction.
- 2. Do not remove the mounting screws from the bonnet.

As this may cause malfunction.

3. Double action type requires two actions (push the handle + turn). Confirm that the handle is pushed properly before turning it. If the handle is not pushed properly to the end, the internal parts will be broken by turning the handle. Piping

▲Warning

1. Before piping is connected, the pipes should be thoroughly blown through with air (flushing) or washed to remove chips, cutting oil and other debris from inside.

Should they remain, they could cause malfunction.

- When connecting pipes and fittings, etc., be sure that neither chips from the pipe threads nor sealing material get inside the valve.
 When using sealant tape, leave 1.5 to 2 thread ridges exposed at the end of the pipe/littina.
- 3. When screwing a piping component into the valve, secure the female threaded side and apply the recommended tightening torque.

Under tightening may result in loosening or sealing failure while over tightening may cause damage to threads and other problems.

Recommended tightening torque Unit:							
Connection thread	1/8	1/4	3/8	1/2 3/4		1	
Torque	7 to 9	12 to 14	22 to 24	28 to 30	28 to 30	36 to 38	

Air Supply

▲Warning

1. Use clean air.

Do not use compressed air which contains chemicals, synthetic oils containing organic solvents, salts or corrosive gases, etc., as this can cause damage or malfunction.

2. Install an air dryer or after cooler on the upstream side of the pressure release 3 port valve because air containing excessive drainage may cause malfunction.

▲Caution

- 1. Install an air filter of 5 μm or less filtration on the inlet side.
- Install a mist separator on the inlet side to remove carbon powder from the compressor or other equipment. An excessive amount of carbon dust ingress via the inlet may cause the valve to malfunction.

Refer to "SMC Air Preparation System" for further details on compressed air quality.



VHS20/30/40/50 Series VHS2510/3510/4510/5510 Series Specific Product Precautions 2

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

Operating Environment

AWarning

- 1. Do not use valves where there is direct contact with, or in atmospheres of, corrosive gases, chemicals, salt water, water or steam.
- 2. Do not use in an explosive atmosphere.
- Do not use in locations subject to vibration or impact. Confirm the specifications for each series.
- 4. A protective cover should be used to shield valves from direct sunlight.
- 5. Shield valves from radiated heat generated by nearby heat sources.
- 6. Employ suitable protective measures in locations where there is contact with water droplets, oil, or welding spatter.
- 7. Install a silencer into port 3 (R) to prevent the ingress of dust if there is a lot of dust in the atmosphere.

If dust enters the valve via port 3 (\mbox{R}) , it may cause air leakage.

If above conditions (1 to 7) are applicable, use metal handle/bonnet type for your safety.

Maintenance

AWarning

1. Perform maintenance procedures as shown in the operation manual.

If handled improperly, malfunction or damage of machinery or equipment may occur.

2. Do not disassemble the product.

Improper handling will cause malfunction or breakage of the machinery or equipment.

3. When equipment is to be removed, first confirm that measures are in place to prevent dropping of driven objects and run-away of equipment, etc. Then cut the supply air pressure and electric power, and exhaust all compressed air from the system using its residual pressure release function.

When the equipment is to be started again after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators and then confirm that equipment operates normally.

≜Caution

1. Once a lubricant is introduced, be sure to continue lubrication.

If it is discontinued, malfunction may result due to loss of the initial lubricant. Apply class 1 turbine oil (ISO VG32) as a lubricant. Use of other lubricants may cause malfunction.

Built-in Silencer (Option) Bronze Sintered Metal Element

≜Caution

Products made of bronze may contain uneven color due to the oxidization process of the atmosphere.

However, this oxidization process occurs in the limited range of less than $1\mu m$ of thickness and is so thin as to not affect the product characteristics.

The uneven color occurs depending on the storage duration before utilization (stock as a product, stock in customer)

* If this is a problem, please contact SMC so that SMC can pre-treat them with nickel plating.

VM
VMG
VR
VR51
VHK
VH
VHS
VHS