Circulating Fluid Temperature Controller Refrigerated Thermo-chiller

HRZ Series

SEMATECH S2-93, S8-95

SEMI Standard S2-0703, S8-0701, F47-0200

- Fluorinated fluids/Ethylene glycol aqueous solution/ Type of circulating fluid: Tap water, Deionized water
- Temperature -20 to 40°C/20 to 90°C/-20 to 90°C range setting:
- Cooling capacity: 1 kW/2 kW/4 kW/8 kW/10 kW to Max.15 kW
- Temperature stability: ±0.1 °C
- Refrigerant: **R404A** (HFC)/**R134a** (HFC)

More effective energy-saving is achieved through use of a DC inverter compressor and an **inverter** pump.

Inverter type **Power consumption 1.1** kWh/h **Facility water 2** L/min



HRS090 HRS100/150

HRSH HRSE

HEC

HEB

Energy Saving


Heated refrigerant

emission gas

Power consumption:

Max. 40% reduction (SMC comparison)


In addition to the optimum control of the expansion valve by the original controller, by recycling the heat emitted from the facility water, power consumption is dramatically reduced.



- Reduced running cost
- Contribution to the environmental preservation
- Circulating fluid:

7 reduction (SMC comparison)

Enhanced temperature control technology and the dual tank construction achieved the reduced circulating fluid required for operation.



- Reduced initial cost
- Contribution to the environmental preservation

More effective energy-saving is achieved through use of a DC inverter compressor and an inverter pump.

reduction (SMC comparison)

Current model

Heater

Cold

liquid

Circulating fluid

20 L/min

refrigerant

Cold

liquid

Circulating fluid

"Construction and Principles" on page 225.

achieved the reduced facility water amount.

■ Reduced facilities investment

■ Reduced running cost

■ Space saved facility water equipment

refrigerant

This illustration is for an image only. For piping systems, refer to


Max. 75% reduction (SMC comparison)

Enhanced performance of a heat exchanger, recycle use of

the emitted heat and the reduced power consumption

5 L/min


Operating conditions: -10°C, 0 kW with 50% load, 2 kW with 50% load



Double Inverter Type

Power consumption:

Max. 82% reduction (SMC comparison)



Facility water:

Facility water:

Current


model

HRZ002-L

High Performance


Temperature stability: ± (When a load is stable)

Enhanced temperature control technology achieved ±0.1°C temperature stabilities when a load is stable.

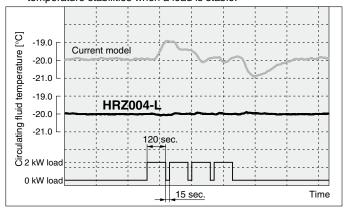

Cooling time: Max. 43% reduction (SMC comparison)

Special temperature control technology achieved the utmost performance, resulting in the reduced cooling time.

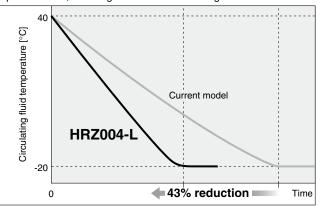

Max. 29% reduction (SMC comparison)


By emitting the heat from the rear side, ventilation slits on the side are unnecessary offering reduced installation space.

Current model: Body space: W400 mm x D845 mm

Ventilation space: 100 mm

HRZ008-H: Body space: W380 mm x D870 mm

Ventilation space: 0

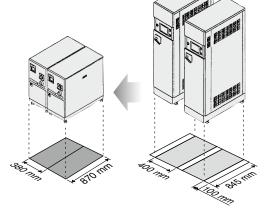


HRZ008-H 0.66 m²

Current model 0.93 m²

Leakless

All in tank

Housing the pump or heat exchanger inside the tank has eliminated any external leakage of the circulating fluid.

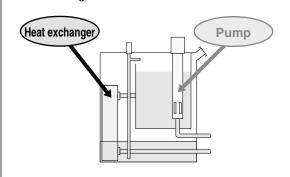

Communications

- Contact input/output signal
- Serial RS-485 communication
- Analog communication (Refer to "Options" on page 249.)
- DeviceNet communication (Refer to "Options" on page 249.)


Device Net

■ Trademark

DeviceNet™ is a trademark of ODVA.

Cooling capacity: Max. 15 kW

Up to 15 kW cooling capacity achieved.

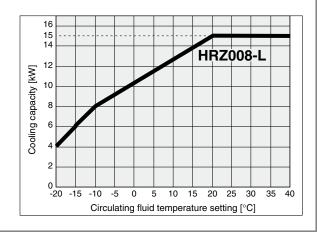

Fluid contact parts adopt the materials compatible for various circulating fluids.

(Stainless steel, EPDM, etc.)

- Fluorinated fluids: Flourinert™ FC-3283, FC-40
 GALDEN® HT135, HT200
- 60% ethylene glycol aqueous solution
- Deionized water/Tap water

Regarding the fluid other than the above, please contact SMC. Flourinert[™] is a trademark of 3M. GALDEN[®] is a registered trademark of Solvay Solexis, Inc.


Techn


Easy Maintenance

Circulating fluid automatic recovery function (Refer to "Options" on page 249.)

Circulating fluid inside a thermo-chiller tank can be recovered automatically. (Recovery volume: 15 L to 17 L)

- Reduced maintenance time
- Faster operation
- Reduced circulating liquid loss by evaporation or spill

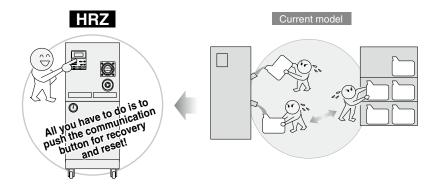

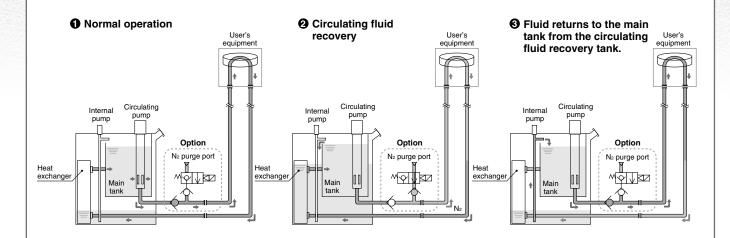



Circulating fluid electric resistance ratio control function (Refer to "Options" on page 249.)

(DI control kit)

- Easy maintenance
 - Checking the electrical component parts accessible from the front side only
- Possible to replace the maintenance parts (such as a pump) without removing the pipings and discharging the circulating fluid.
- Various alarm displays (Refer to page 245.)








- Etching equipment
- Coating equipment
- Spatter equipment
- Dicing equipment
- Cleaning equipment
- Tester, etc.

Food

Example: Tofu (Bean curd) production




- Bottle-cleaning machine
- forming tofu by mixing the boiled
- Tofu (Bean curd) production equipment
- Noodle-making machine, etc.

Water temperature control for soybean milk and bittern


Medical

Example: Blood preservation

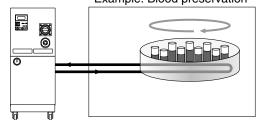

- X-ray instrument
- MRI
- Blood preservation equipment

Analysis



Prevents the distortion caused by

- Electron microscope X-ray analytical
- the heat generated by the electronic gun in an electronic microscope. Gas chromatography


Example: Printing temperature control

Printing

Ink rolle

Sugar level analytical instrument, etc.

Machine tool

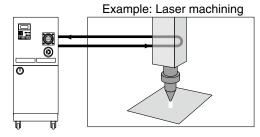

- Wire cutting Grinder
- Spot welding
- Plasma welding
- Temperature-controlling the laser generating tube enables the laser wavelength to be optimised, improving the accuracy of the machined cross sectional area.
- Laser machining, etc.

Offset printing

- machine
- UV equipment, etc.

Temperature-controlling the ink roller enables to control the Automatic developing
 washing
 Automatic developing
 washing
 washing
 washing
 washing the tint of colors.


- machine

HRW

HEC

224

Molding

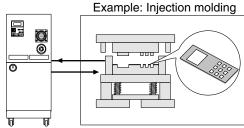

- Plastic molding Rubber molding
- Temperature-controlling the mold results in improved product quality.
- Wire cable coating machine
- Injection molding, etc.

HRSH090

HRS090

HRS100/150

Construction and Principles

Refrigeration circuit Injection valve Expansion valve (a) Expansion ✓ valve (b) Circulating Internal pump Compressor pump Level switch Water-regulating valve 囯 Facility Refrigerant Heat water exchanger outlet Highpressure gauge High-Main Pressure Temperature pressure tank sensor Water-cooled shutoff condenser Circulating pressure fluid Facility ->> switch outlet water Flow rate sensor Circulating fluid return inlet Sub-tank

Circulating fluid circuit

With the **circulating pump**, circulating fluid will be discharged to the user's equipment side. After the circulating fluid will heat or cool the user's equipment side, it will be returned to the **main tank** via the **heat exchanger**.

Circulating fluid circuit

A **sub-tank** is not used under the normal operation. It will be used when a circulating fluid is recovered from the user's equipment side.

The **internal pump** is used to transfer a circulating fluid from the **sub-tank** to the **main tank**. (Refer to "Circulating fluid automatic recovery function" on page 223.)

Refrigeration circuit

When the circulating fluid temperature is rising higher than the set temperature, open the **expansion valve (a)** to introduce refrigerant gas at a lower temperature to the **heat exchanger**. With this, the circulating fluid will be cooled down

Oppositely, when the circulating fluid is getting lower against the set temperature, open the **expansion valve (b)** and introduce refrigerant gas at a high temperature without going through the **water-cooled condenser** to the **heat exchanger**. With this heat, the circulating fluid will be heated.



HRS

HRS090

190 || HRS100/15

HRSH

CONTENTS

HRZ Series



Refrigerated Thermo-chiller HRZ Series

Model 9	Selection
---------	-----------

Guide to Model Selection F	² age 227
Required Cooling Capacity Calculation F	age 228
Precautions on Model Selection	age 229
Circulating Fluid Typical Physical Property Values ··· F	Page 230

Fluorinated Fluid Type

How to Order/Specifications	Page 231	l
Cooling Capacity/Heating Capacity	Page 232	2
Pump Canacity	Page 233	2

Ethylene Glycol Type

How to Order/Specifications	Page	23
Cooling Capacity/Heating Capacity	Page	23
Pump Capacity	Page	23

Tap/Deionized Water Type

How to Order/Specifications ······	Page	237
Cooling Capacity/Heating Capacity/Pump Capacity ···	Page	238

Double Inverter Type

How to Order/Specifications ······	Page	239
Cooling Capacity/Heating Capacity/Pump Capacity ···	Page	240

Common Specifications

Dimensions	Page 241
Communication Functions ·····	· Page 243
· Contact Input/Output·····	· Page 243
· Serial RS-485 ·····	· Page 244
· Connector Location·····	· Page 244
Operation Display Panel ·····	· Page 245
Alarm ·····	· Page 245

Optional Accessories

① Bypass Piping Set ······	⊃age 2	46
② Anti-quake Bracket ·····	age 2	46
34-Port Manifold ······	age 2	47
④ DI Filter	age 2	47
⑤ Insulating Material for DI Filter	age 2	47
660% Ethylene Glycol Aqueous Solution	age 2	48
7 Concentration Meter ······	age 2	48

Options

Analog Communication	Page	249
DeviceNet Communication ·····	Page	249
NPT Fitting·····	Page	249
DI Control Kit ·····	Page	249
Circulating Fluid Automatic Recovery	Page	250

Specific Product Precautions Page 251



HRZ Series Model Selection

Guide to Model Selection

1. How much is the temperature in degrees centigrade for the circulating fluid?

Temperature range which can be set with the thermo-chiller

L: -20°C to 40°C ("L2" (tap water, deionized water specification) can be set 10°C to 40°C.)


H: 20°C to 90°C

W: -20°C to 90°C (Select "W" only when the temperature ranges of "L" or "H" are not applicable. HRZ010-W2S (tap water, deionized water specification) can be set 10°C to 60°C.)

Example) User requirement: 50°C (→ Temperature range 20°C to 90°C, "H" type will be appropriate.)

2. What kind of the circulating fluids will be used?

Relationship between circulating fluid (which can be used with the thermo-chiller) and temperature

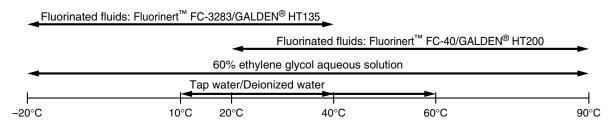

Example) User requirement: Fluorinated fluids

Based on the results 1. and 2., Cooling capacity relating "Fluorinated fluids" and "Temperature range 20°C to 90°C" is shown on page 232.


3. What is the kW for the required cooling capacity?

* To calculate the cooling capacity, referring to page 228.

Example) User requirement: 5 kW →

Plot the point of intersection between the operating temperature (50°C) and the cooling capacity (5 kW) in the cooling capacity graph.

[Cooling Capacity Graph] Circulating Fluid: Fluorinated Fluids, Temperature Range: 20 to 90°C

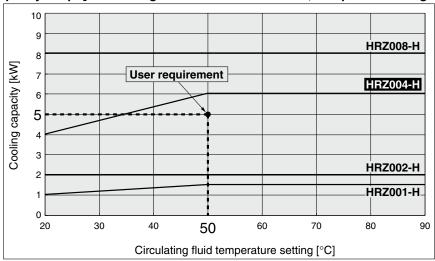

The point plotted in the graph is the requirement from the user. Select the thermo-chiller models exceeding this point. In this case, select the **HRZ004-H**.

GALDEN® is a registered trademark, belonging to the Solvay Group or its corresponding owner. Fluorinert™ is a trademark of 3M.



Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

Heat generation amount Q: 3.5 kW

Cooling capacity = Considering a safety factor of 20%, 3.5 x 1.2 = 4.2 kW

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount Q : Unknown

Circulating fluid temperature difference ΔT (= T2 – T1): 6.0°C (6.0 K) Circulating fluid outlet temperature T1 : 20°C (293.15 K) Circulating fluid return temperature T2 : 26°C (299.15 K)

Circulating fluid flow rate L : 20 L/min
Circulating fluid : Fluorinated fluid

Density γ: 1.80 x 10³ kg/m³

Specific heat **C**: 0.96 x 10³ J/(kg·K)

(at 20°C)

 Refer to page 230 for the typical physical property values by circulating fluid.


$$Q = \frac{\Delta T \times L \times \gamma \times C}{60 \times 1000}$$

$$= \frac{6.0 \times 20 \times 1.80 \times 10^3 \times 0.96 \times 10^3}{60 \times 1000}$$

= 3456 W = 3.5 kW

Cooling capacity = Considering a safety factor of 20%, $3.5 \times 1.2 = \boxed{4.2 \text{ kW}}$

Thermo-chiller

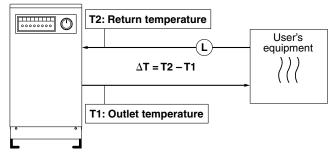

Example of current measurement units (Reference)

Unknown 6.0°C

20°C 26°C 1.2 m³/h

Fluorinated fluid

Density γ : 1.80 x 10³ kg/m³ Specific heat **C**: 0.23 kcal/kg·°C (at 20°C)

* Refer to page 230 for the typical physical property values by circulating fluid.

$$Q = \frac{\Delta T \times L \times \gamma \times C}{860}$$

$$=\frac{6.0 \times 1.2 \times 1.80 \times 10^3 \times 0.23}{860}$$

= 3.5 kW

Cooling capacity = Considering a safety factor of 20%,

3.5 x 1.2 = 4.2 kW

Required Cooling Capacity Calculation

Example 3. When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Cooling time ${f h}$: 15 min Cooling temperature difference ${f \Delta T}$: (20°C (20 K)

 $(40^{\circ}\text{C} - 20^{\circ}\text{C} \rightarrow 20^{\circ}\text{C})$

Circulating fluid : Fluorinated fluid

Density γ : 1.80 x 10³ kg/m³ Specific heat **C**: 0.96 x 10³ J/(kg·K) (at 20°C)

 Refer to page 230 for the typical physical property values by circulating fluid.


$$Q = \frac{\Delta T \times V \times \gamma \times C}{h \times 60 \times 1000}$$
$$= \frac{20 \times 60 \times 1.80 \times 10^{3} \times 0.96 \times 10^{3}}{15 \times 60 \times 1000}$$

= 2304 W = 2.3 kW

Cooling capacity = Considering a safety factor of 20%,

2.3 x 1.2 = 2.8 kW (When the circulating fluid temperature is 20°C.)

(In this case, selected thermo-chiller model will be either HRZ002-L or HRZ004-H.)

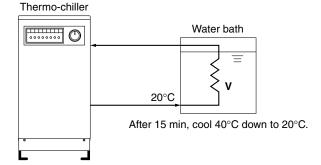

Example of current measurement units (Reference)

0.06 m³ 0.25 h 20°C

Fluorinated fluid

= 2.3 kW

Density γ: 1.80 x 10³ kg/m³ Specific heat **C**: 0.23 kcal/kg.°C (at 20°C)

* Refer to page 230 for the typical physical property values by circulating fluid.

$$Q = \frac{\Delta T \times V \times \gamma \times C}{h \times 860}$$
$$= \frac{20 \times 0.06 \times 1.80 \times 10^{3} \times 0.23}{0.25 \times 860}$$

Cooling capacity = Considering a safety factor of 20%,

2.3 x 1.2 = 2.8 kW (When the circulating fluid temperature is 20°C.)

(In this case, selected thermo-chiller model will be either HRZ002-L or HRZ004-H.)

* This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping material or shape.

Precautions on Model Selection

1. Heating capacity

When setting the circulating fluid temperature at a higher temperature than the room temperature, the circulating fluid temperature will be heated with the thermo-chiller. Heating capacity varies depending on the model of the HRZ series. Also, the heating capacity varies depending on the circulating fluid temperature. Consider the heat radiation amount or thermal capacity of the user's equipment. Check beforehand if the required heating capacity is provided, based on the heating capacity graph for the respective model.

2. Pump capacity

<Circulating fluid flow rate>

Pump capacity varies depending on the model selected from the HRZ series. Also, circulating fluid flow varies depending on the circulating fluid discharge pressure. Consider the installation height difference between our thermo-chiller and a user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved using the pump capacity curves for each respective model.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves for the respective model. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.



Circulating Fluid Typical Physical Property Values

* Shown below are reference values. Please contact circulating fluid supplier for details.

Fluorinated Fluids

Physical property value	Density γ	Specific heat C				
Temperature	[kg/m³] [g/L]	[J/(kg·K)]	([kcal/kg⋅°C])			
−10°C	1.87 x 10 ³	0.87 x 10 ³	(0.21)			
20°C	1.80 x 10 ³	0.96 x 10 ³	(0.23)			
50°C	1.74 x 10 ³	1.05 x 10 ³	(0.25)			
80°C	1.67 x 10 ³	1.14 x 10 ³	(0.27)			

60% Ethylene Glycol Aqueous Solution

Physical property value	Density γ	Specific	c heat C
Temperature	[kg/m³] [g/L]	[J/(kg·K)]	([kcal/kg⋅°C])
−10°C	1.10 x 10 ³	3.02 x 10 ³	(0.72)
20°C	1.08 x 10 ³	3.15 x 10 ³	(0.75)
50°C	1.06 x 10 ³	3.27 x 10 ³	(0.78)
80°C	1.04 x 10 ³	3.40 x 10 ³	(0.81)

Water

Density γ : 1 x 10³ [kg/m³] [g/L] Specific heat C: 4.2 x 10³ [J/(kg·K)] (1.0 [kcal/kg·°C])


HRS090

HRS100/150

Thermo-chiller Fluorinated Fluid Type **HRZ** Series



How to Order

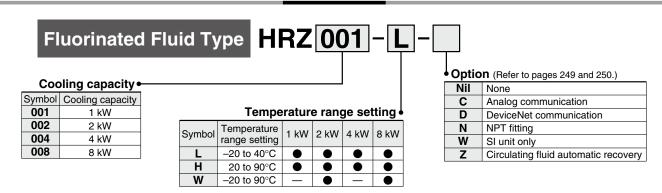

Specifications (For details, please refer to our "Product Specifications" information.)

	Model	HRZ001-L	HRZ002-L	HRZ004-L	HRZ008-L	HRZ001-H	HRZ002-H	HRZ004-H	HRZ008-H	HRZ002-W	HRZ008-W
Cooling method					\	Nater-cooled	l refrigeration	on			
Refrigerant			R404A (HFC)								
Re	frigerant charge kg	1.15	1.15	1.3	2	0.75	0.75	1.15	1.15	1.15	1.15
	entrol system					PID c					
Ar	nbient temp./humidity*1				Temperature	e: 10 to 35°C	, Humidity:	30 to 70%RH	l		
	Circulating fluid*2	g fluid*2 Fluorinert™ FC-3283/GALDEN® HT135 Fluorinert™ FC-40/GALDEN® HT		Fluorinert [™] FC-3283/GALDEN [®] HT135 Fluorinert [™] FC-40/GALI				HT200	• -20 to 40°C: FC-3283/GAI • 20 to 90°C: F FC-40/GALD	LDEN [®] HT135 Fluorinert [™]	
Ĕ	Temp. range setting*1 °C		-20 t	to 40			2	0 to 90		-20	to 90
system	Cooling capacity*3 kW	1.0	2.0	4.0	8.0	1.0	2.0	4.0	8.0	2.0	8.0
		(at -10°C)	(at -10°C)	(at -10°C)	(at -10°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)
fluid	Heating capacity*3 kW	2.8 (at -10°C)	3.2 (at –10°C)	3.6 (at –10°C)	5.9 (at –10°C)	2.3 (at 20°C)	2.6 (at 20°C)	2.8 (at 20°C)	3.0 (at 20°C)	2.3 (at 20°C)	3.3 (at 20°C)
	Temp. stability*4 °C	(at 10 0)	(at 10 0)	(at 10 0)	(at 10 0)	±0	,	(41 20 0)	(41 20 0)	(at 20 0)	(41 20 0)
Circulating	Pump capacity MPa (50/60 Hz)*5	0.45/0.65 (at 20 L/min)			0.65/0.95 (at 30 L/min)	0.40/0. (at 20 L/		0.45/0.65 (at 20 L/min)			
ਹੋ	Rated flow*6 L/min	20 30 20				0					
	Main tank capacity*7 L		Approx. 15 Approx. 22 Approx. 12				Approx. 15				
	Sub-tank capacity*8 L		Approx. 16		Approx. 17	Approx.	. 15		Approx	c. 16	
	Port size	Rc3/4									
	Fluid contact material		Stainle	ss steel, EPI	DM, Copper l	brazing (Hea	t exchange	r), PPS, Silico	one, Fluorore	esin	
tem	Temperature range °C					10 to 2	25				
rsys	Pressure range MPa					0.3 to (0.7				
Cooling water system	Required flow rate (50/60 Hz)*9 L/min	5/5	6/6	15/22	18/23	3/4	5/6	9/10	13/14	6/7	13/14
gilo	Port size					Rc1/					
_	Fluid contact material							iger), Silicone			
E H	Power supply		•	200 VAC 50	Hz, 3-phase	200 to 208 \	VAC 60 Hz	Allowable vo	Itage range:	±10%	
system	Breaker capacity A						30				
	Rated current A	20 25 46 14 23									
Electrical	Alarm	Refer to page 245.									
_	Communications	Contact input/output (D-sub 25 pin) and Serial RS-485 (D-sub 9 pin) (Refer to pages 243 and 244.)									
-	eight* ¹⁰ kg	16	65	175	275	14				65	
Sa	fety standards		UL, CE	E marking, S	EMI (S2-070	3, S8-0701,	F47-0200),	SEMATECH	(S2-93, S8-9	95)	
÷1	t should have no condensation.										


- *2 GALDEN® is a registered trademark, belonging to the Solvay Group or its corresponding owner. Fluorinert™ is a trademark of 3M. Regarding the fluid other than the above, please contact SMC.
- *3 ① Facility water temperature: 25°C, ② Circulating fluid flow rate: Values at rated circulating fluid flow rate. Values common for 50/60 Hz.
- *4 Value with a stable load without turbulence in the operating conditions. It may be out of this range depending on operating conditions.
- *5 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.
- *6 Required flow rate for cooling capacity or maintaining the temperature stability. When used below the rated flow, use the individually sold, "Bypass Piping Set" (Refer to page 246).
- *7 Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger)
- *8 Preliminary space volume without main tank capacity. Available for collecting the circulating fluid inside an external piping or for preliminary injection.
- *9 Required flow rate when a load for the cooling capacity is applied at a facility water temperature of 25°C.




^{*10} Weight in the dry state without circulating fluids

Cooling Capacity


HRZ001-L/002-L/004-L/008-L

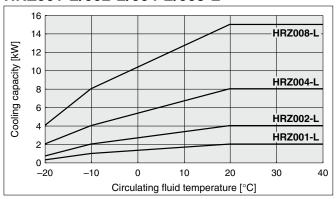

HRZ001-H/002-H/004-H/008-H

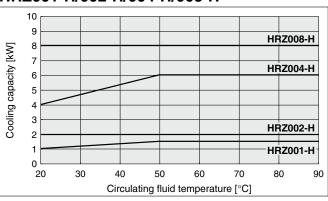


HRZ002-W/008-W

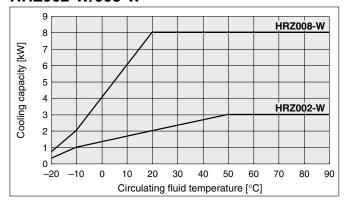


Heating Capacity


HRZ001-L/002-L/004-L/008-L

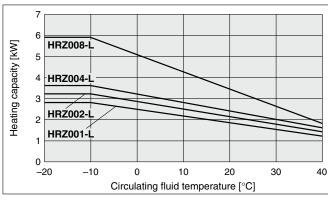

HRZ001-H/002-H/004-H/008-H

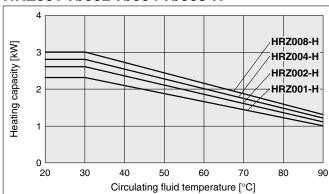

HRZ002-W/008-W

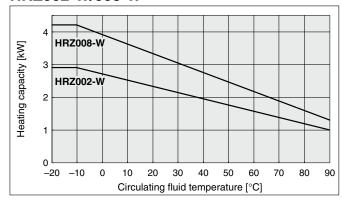

HRS090

HRS

HRS100/150 HRSH090

HRSH

HRSE

HRZD

HRZ

HRW

HECR


HEC

HEB


HRZ Series

Pump Capacity (Thermo-chiller Outlet)


HRZ001-L/002-L/004-L

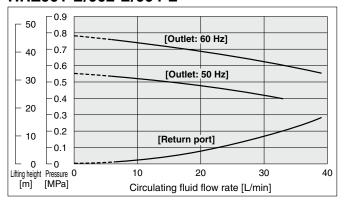


HRZ008-L

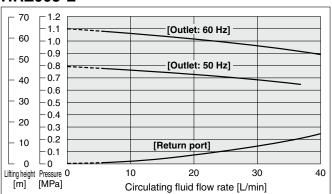

HRZ001-H/002-H

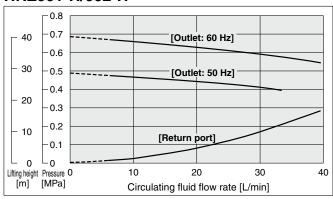

HRZ004-H/008-H HRZ002-W/008-W

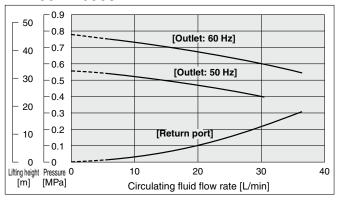


^{*} When the circulating fluid flow is below 6 L/min, the in-built operation stop alarm will be activated. It is not possible to run the equipment. (common for all models)



SEMI

How to Order

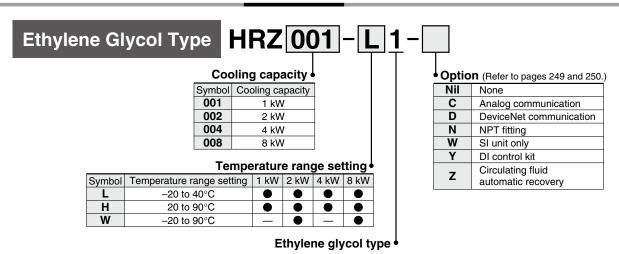

Specifications (For details, please refer to our "Product Specifications" information.)

_												
	Model	HRZ001-L1	HRZ002-L1	HRZ004-L1	HRZ008-L1				HRZ008-H1	HRZ002-W1	HRZ008-W1	
-	oling method		Water-cooled refrigeration									
	frigerant		R404A (HFC)									
Refrigerant charge kg		1.15	1.15	1.3	2	0.75	0.75	1.15	1.15	1.15	1.15	
	ntrol system		PID control									
An	nbient temp./humidity*1				Temperature	e: 10 to 35°C	, Humidity: 3	0 to 70%RH				
	Circulating fluid*2				60% e	thylene glyco	ol aqueous s	olution				
	Temp. range setting*1 °C			to 40			20 to				o 90	
ᅟ	Cooling capacity*3 kW	1.0	2.0	4.0	8.0	1.0	2.0	4.0	8.0	2.0	8.0	
system	cooming capacity in	(at -10°C)	(at -10°C)	(at -10°C)	(at -10°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	
sys	Heating capacity*3 kW	2.5	2.9	3.4	6.1	1.8	2.1	2.5	3.0	2.2	3.3	
		(at -10°C)	(at -10°C)	(at -10°C)	(at -10°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)	
fluid	Temp. stability*4 °C					±0).1					
Circulating			0.25/0.40 (at 20 L/min)			0.25/0.35 (at 20 L/min) 0.25/0.40 (at 20 L/min)						
Rated flow*6 L/min					20							
ř	Main tank capacity*7 L		Approx. 15 Approx. 22			Appro	x. 12		Appro	ox. 15		
0	Sub-tank capacity*8 L		Approx. 16		Approx. 17	Appro	x. 15	Approx. 16				
	Port size					Rc	3/4					
	Fluid contact material		Stain	less steel, E	PDM, Coppe	r brazing (H	eat exchange	er), PPS, Sill	icone, Fluoro	resin		
system	Temperature range °C					10 to	o 25					
rsys	Pressure range MPa					0.3 to	0.7					
water	Required flow rate (50/60 Hz)*9 L/min	5/5	6/6	15/22	18/23	3/4	5/6	9/10	13/14	5/7	13/14	
Cooling	Port size					Rc	1/2					
និ	Fluid contact material				, EPDM, Cop							
E	Power supply		3-phas	e 200 VAC 5	0 Hz, 3-phas	se 200 to 208	3 VAC 60 Hz	Allowable	voltage range	e ±10%		
system	Breaker capacity A		30		60	2	-			30		
	Rated current A						3					
Electrical	Alarm					Refer to p						
=	Communications				sub 25 pin) a			9 pin) (Refe				
-	eight*10 kg	16	65	175	275	14			16			
Sa	fety standards		UL,	CE marking,	SEMI (S2-07	703, S8-070 ⁻	1, F47-0200)	, SEMATEC	H (S2-93, S8	3-95)		

*1 It should have no condensation.

*2 Dilute pure ethylene glycol with tap water. Additives such as preservatives cannot be used.

- *3 ① Facility water temperature: 25°C, ② Circulating fluid flow rate: Values at rated circulating fluid flow rate. Values common for 50/60 Hz.
- *4 Value with a stable load without turbulence in the operating conditions. It may be out of this range when a DI control kit (option Y) is used or in some other operating conditions.
- *5 The capacity at the thermo-chiller outlet when the circulating temperature is 20°C.
- *6 Required flow rate for cooling capacity or maintaining the temperature stability. When used below the rated flow, use the individually sold, "Bypass Piping Set" (Refer to page 246).
- *7 Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger)
- *8 Preliminary space volume without main tank capacity. Available for collecting the circulating fluid inside an external piping or for preliminary injection.
- *9 Required flow rate when a load for the cooling capacity is applied at a facility water temperature of 25°C. *10 Weight in the dry state without circulating fluids



HRS090

HRS100/150

HRSH090

HRSH

HRW


HECR

HEC


HRZ Series

Cooling Capacity


HRZ001-L1/002-L1/004-L1/008-L1

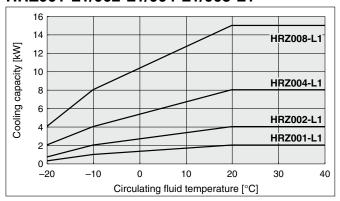

HRZ001-H1/002-H1/004-H1/008-H1

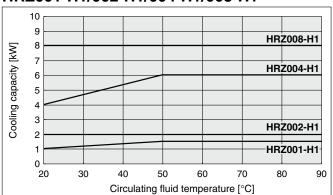


HRZ002-W1/008-W1

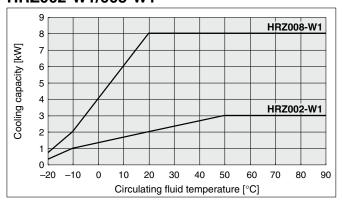


Heating Capacity


HRZ001-L1/002-L1/004-L1/008-L1

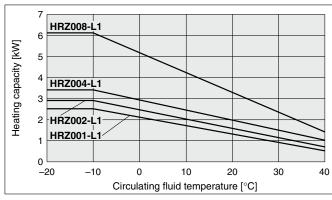

HRZ001-H1/002-H1/004-H1/008-H1

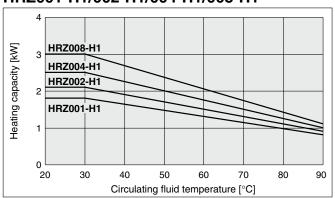


HRZ002-W1/008-W1

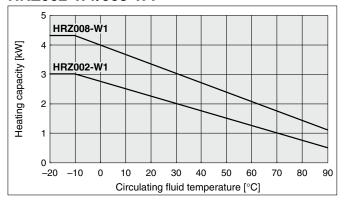


Pump Capacity (Thermo-chiller Outlet)


HRZ001-L1/002-L1/004-L1 HRZ004-H1/008-H1 HRZ002-W1/008-W1

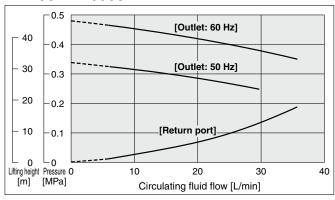



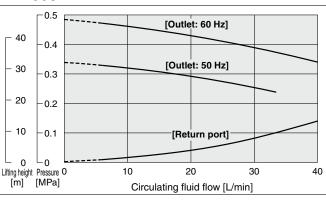

HRZ001-H1/002-H1

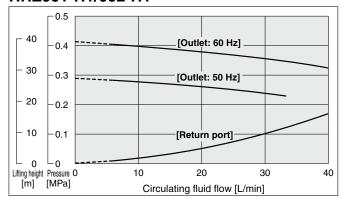


* When the circulating fluid flow is below 6 L/min, the in-built operation stop alarm will be activated. It is not possible to run the equipment. (common for all models)

HEB

Thermo-chiller Tap/Deionized Water Type **HRZ** Series



How to Order

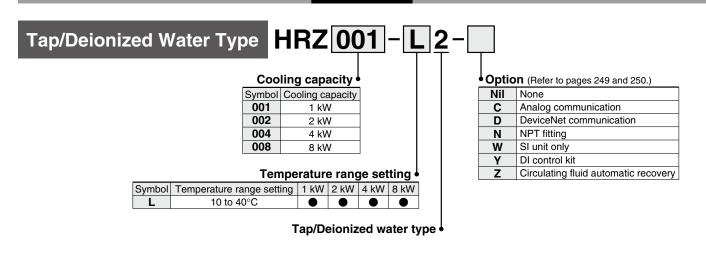

Specifications (For details, please refer to our "Product Specifications" information.)

Model		HRZ001-L2	HRZ002-L2	HRZ004-L2	HRZ008-L2		
Cooling method		Water-cooled refrigeration					
Refrigerant		R134a (HFC)					
Refrigerant charge	kg	1.1	1.1	1.1	1.1		
Control system		PID control					
Ambient temperature/humidity*	:1		Temperature: 10 to 35°C,	Humidity: 30 to 70%RH			
Circulating fluid*2			Tap water, Dei	onized water			
Temperature range setting*1	°C		10 to	40			
Cooling capacity*3 Heating capacity*3 Temperature stability*4	kW	1.0	2.0	4.0	8.0		
b	KVV	(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)		
Heating capacity*3	kW	0.90	0.98	1.15	1.25		
i Leating Capacity		(at 20°C)	(at 20°C)	(at 20°C)	(at 20°C)		
	°C	±0.1					
Pump capacity (50/60 Hz)*5 Rated flow*6 Main tank capacity*7 Sub-tank capacity*8	MPa	0.25/0.38 (at 20 L/min)					
Rated flow*6	L/min	20					
Main tank capacity*7	L	Approx. 15					
Sub-tank capacity*8	L	Approx. 16					
Port size			Rc3	/4			
Fluid contact material		Stainless steel	, EPDM, Copper brazing (He	at exchanger), PPS, Silicor	ne, Fluororesin		
Temperature range	°C		10 to	25			
Temperature range Pressure range Required flow rate (50/60 Hz)* Port size Fluid contact material	MPa	0.3 to 0.7					
Required flow rate (50/60 Hz)*	⁹ L/min	5/5	6/6	15/22	18/23		
Port size			Rc1	/2			
Fluid contact material		Stainless st	eel, EPDM, Copper brazing (Heat exchanger), Silicone,	Brass, NBR		
Power supply		3-phase 200 VA	C 50 Hz, 3-phase 200 to 208	VAC 60 Hz Allowable volt	age range ±10%		
Breaker capacity	Α		30				
Rated current	Α		19	<u> </u>			
Power supply Breaker capacity Rated current Alarm Communications		Refer to page 245.					
		Contact input/output (D-sub 25 pin) and Serial RS-485 (D-sub 9 pin) (Refer to pages 243 and 244.)					
Weight*10	kg	165					
Safety standards		UL, CE marking, SEMI (S2-0703, S8-0701, F47-0200), SEMATECH (S2-93, S8-95)					

^{*1} It should have no condensation.



^{*2} If tap water or deionized water is used, please use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994/cooling water system - circulation type - make-up water). The minimum electric conductivity of the deionized water used as the fluid should be 0.5 $\mu\text{S/cm}$ (or electric resistivity 2 M $\Omega \bullet \text{cm}$ at maximum).

^{*3} ① Facility water temperature: 25°C, ② Circulating fluid flow rate: Values at rated circulating fluid flow rate. Values common for 50/60 Hz.

^{*4} Value with a stable load without turbulence in the operating conditions. It may be out of this range when a DI control kit (option Y) is used or in some other operating conditions.

^{*5} The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.

^{*6} Required flow rate for cooling capacity or maintaining the temperature stability. When used below the rated flow, use the individually sold, "Bypass Piping Set" (Refer to page 246).

^{*7} Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger)


^{*8} Preliminary space volume without main tank capacity. Available for collecting the circulating fluid inside an external piping or for preliminary injection.

^{*9} Required flow rate when a load for the cooling capacity is applied at a facility water temperature of 25°C.

^{*10} Weight in the dry state without circulating fluids


Cooling Capacity

HRZ001-L2/002-L2/004-L2/008-L2

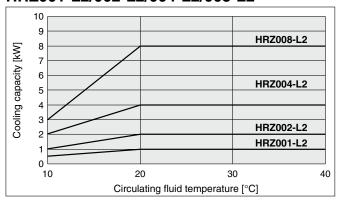


Heating Capacity

HRZ001-L2/002-L2/004-L2/008-L2

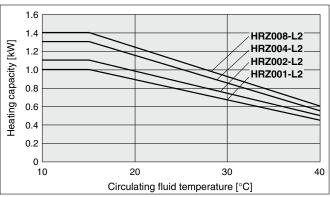

Pump Capacity (Thermo-chiller Outlet)

HRZ001-L2/002-L2/004-L2/008-L2

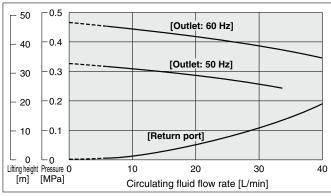

* When the circulating fluid flow is below 6 L/min, the in-built operation stop alarm will be activated. It is not possible to run the equipment. (common for all models)

HRS

HECR



Thermo-chiller Double Inverter Type



HRZ Series

How to Order

Double Inverter Type	HRZ 010 - W	<u>\$</u> -

Cooling capacity •

Symbol Cooling capacity 010 10 kW

Circulating fluid type

Symbol	Circulating fluid type	Temperature range setting
Nil	Fluorinated fluids	−20 to 90°C
1	Ethylene glycol aqueous solution	−20 to 90°C
2	Tap water/Deionized water	10 to 60°C

Double inverter type

Optio	Option (Helel to pages 249 and 250.)				
Nil	None				
С	Analog communication				
D	DeviceNet communication				
N	NPT fitting				
W	SI unit only				
Y *1	Y*1 DI control kit				
Z	Circulating fluid automatic recovery				

*1 Not equipped to the fluorinated fluid type

Specifications

Model		HRZ010-WS	HRZ010-W1S	HRZ010-W2S			
Cooling method			Water-cooled refrigeration				
Refrigerant			R404A (HFC)				
Refrigerant charge	kg	1.55	1.55	1.55			
Control system		PID control					
Ambient temperature/humidity*1		Tempe	erature: 10 to 35°C, Humidity: 30 to 7	0%RH			
Circulating fluid*2		 -20 to 40°C: Fluorinert[™] FC-3283/GALDEN[®] HT135 20 to 90°C: Fluorinert[™] FC-40/GALDEN[®] HT200 	60% ethylene glycol aqueous solution	Tap water, Deionized water			
Temperature range setting*1	°C	-20 t	to 90	10 to 60			
Temperature range setting*1 Cooling capacity*3	kW	10 (at 20°C)	10 (at 20°C)	9 (at 20°C)			
Heating capacity*3 kW		5.0 4.5 (at 20°C) (at 20°C)		2.5 (at 20°C)			
Temperature stability*4 Pump capacity*5 Rated flow*6 Flow range*7	°C	± 0.1 (In cases when the circulating fluid discharge port and the return port are directly connected					
ष्ट्र Pump capacity*⁵	MPa	Max. 0.72 (at 20 L/min) Max. 0.40 (at 20 L/min)		Max. 0.38 (at 20 L/min)			
Rated flow*6	L/min	20					
	L/min	10 to 40 (With flow control function by inverter)					
Main tank capacity*8	L	Approx. 15					
Sub-tank capacity*9	L	Approx. 16					
Port size			Rc3/4				
Fluid contact material		Stainless steel, EPDM,	Copper brazing (Heat exchanger), Pf	PS, Silicone, Fluororesin			
ਛੁ Temperature range	°C	10 to	o 30	10 to 25			
Pressure range	MPa		0.3 to 0.7				
Required flow rate (50/60 Hz)*10	L/min		15/15				
Temperature range Pressure range Required flow rate (50/60 Hz)*10 Port size Fluid contact material			Rc1/2				
Fluid contact material		Stainless steel, EPDM, 0	Copper brazing (Heat exchanger), PF	PS, Silicone, Brass, NBR			
Fower supply		3-phase 200 VAC 50 Hz,	3-phase 200 to 208 VAC 60 Hz Allov	wable voltage range ±10%			
Breaker capacity	Α		30				
Power supply Breaker capacity Rated current Alarm Communications	Α	26	25	25			
ទ្លី Alarm			Refer to page 245.				
Communications		Contact input/output (D-sub 25 pin) and Serial RS-485 (D-sub 25 pin) (Refer to pages 243 and 244.)					
Weight*11	kg	165					
Safety standards	T	UL, CE marking, SEMI (S2-0703, S8-0701, F47-0200), SEMATECH (S2-93, S8-95)					



^{*2} GALDEN® is a registered trademark, belonging to the Solvay Group or its corresponding owner. Fluorinert™ is a trademark of 3M. Dilute pure ethylene glycol with tap water. Additives such as preservatives cannot be used. If tap water or deionized water is used, please use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994/cooling water system - circulation type - make-up water). The minimum electric conductivity of the deionized water used as the fluid should be $0.5 \,\mu$ S/cm (or electric resistivity 2 M Ω -cm at maximum).

^{*3} ① Facility water temperature: 25°C, ② Circulating fluid flow rate: Values at rated circulating fluid flow rate. Values common for 50/60 Hz.

^{*4} Value with a stable load without turbulence in the operating conditions. It may be out of this range when a DI control kit (option Y) is used or in some other operating conditions.

^{*5} The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C.

^{*6} Required flow rate for cooling capacity or maintaining the temperature stability. When used below the rated flow, use the individually sold, "Bypass Piping Set" (Refer to page 246).

^{*7} May not be able to control with the set value depending on the piping specification in the user side.

*8 Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger)


*9 Preliminary space volume without main tank capacity. Available for collecting the circulating fluid inside an external piping or for preliminary injection.

*10 Required flow rate when a load for the cooling capacity is applied at a facility water temperature of 25°C.


^{*11} Weight in the dry state without circulating fluids

Cooling Capacity

HRZ010-WS/010-W1S

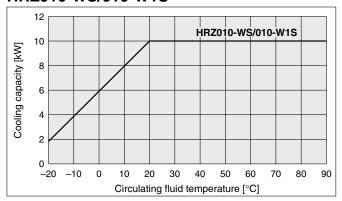


HRZ010-W2S

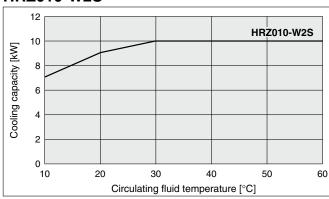

Heating Capacity


HRZ010-WS/010-W1S/010-W2S

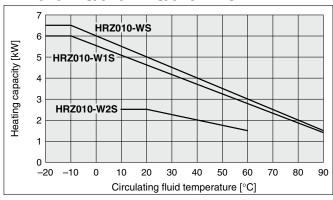


* When pump inverter is operating at frequency of 60 Hz (maximum).

Pump Capacity (Thermo-chiller Outlet)

HRZ010-WS

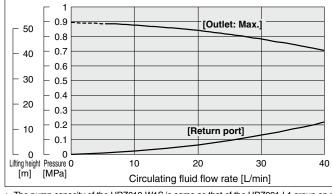


HRZ010-W1S

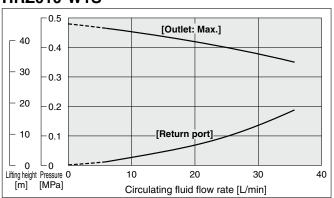

- * The pump capacity of the HRZ010-W1S is same as that of the HRZ001-L1 group on page 236.
- The pump capacity of the HRZ010-W2S is same as on page 238.

HRZ010-W2S

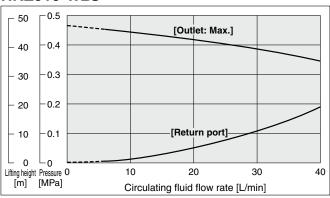

- * When the circulating fluid flow is below 6 L/min, the in-built operation stop alarm will be activated. It is not possible to run the equipment. (common for all models)
- * With flow control function by inverter

SMC

HRS

HRS100/150 HRS090

HRSH090

HRSH

I

HRZ

HRZD

<u>____</u>

HECR

HEC

HEB


iai H

Technic Data

HRZ Series

Common Specifications

Dimensions

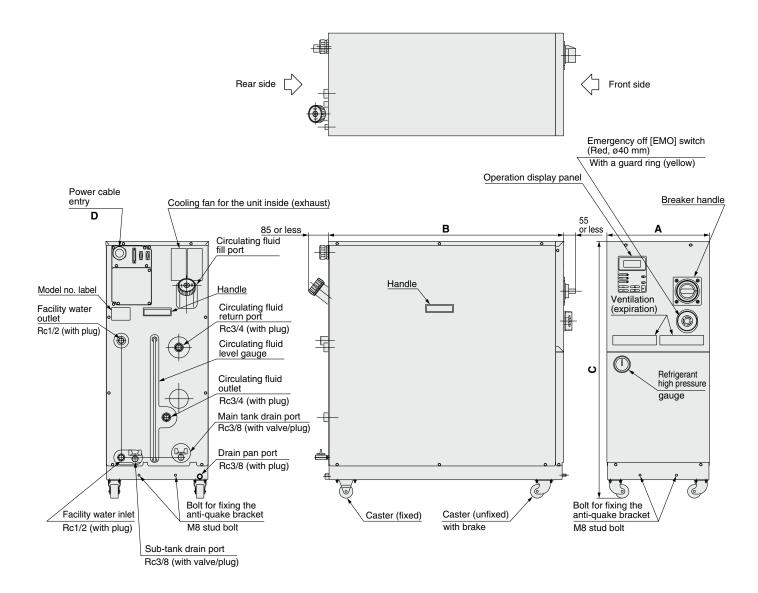

						[mm]
	Model	A	В	С	D	
Fluorinated fluid type	Ethylene glycol type	Tap/Deionized water type	A	В	C	
HRZ001-H HRZ002-H	HRZ001-H1 HRZ002-H1	_	380	870	860	ø18.5 to 20.5
HRZ001-L HRZ002-L, W HRZ004-L, H HRZ008-H, W HRZ010-WS	HRZ001-L1 HRZ002-L1, W1 HRZ004-L1, H1 HRZ008-H1, W1 HRZ010-W1S	HRZ001-L2 HRZ002-L2 HRZ004-L2 HRZ008-L2 HRZ010-W2S	380	870	950	ø18.5 to 20.5

(Dimensional tolerance of A, B, and C: ± 10 mm)



Anti-quake bracket mounting position (Dimensional tolerance: $\pm 5 \text{ mm})$

1217

st Anchor bolts (M8, 8 pcs.) which are suitable for the floor material should be prepared by user.

Anti-quake bracket

					[mm]
		В	С	_	
Fluorinated fluid type	Ethylene glycol type	_ A	•		D
HRZ008-L	HRZ008-L1	415	1080	1075	ø35.0 to 38.0
		•			

(Dimensional tolerance of A, B, and C: ± 10 mm)



HRS090 HRS

HRSH090 | HRS100/150

HRSH

75

HRZD

HRW

HECR

HEC

HEB

hnical |

Communication Functions (For details, please refer to our "Communication Specifications" information.)

Contact Input/Output

Contact Input/Ou	Item	Sno	poifications				
Con	nector no.	Specifications P1 (Refer to page 2/4) for the connector location)					
	on this product's side)	P1 (Refer to page 244 for the connector location.) D-sub 25 P type, Female connector					
	g bolt size	M2.6 x 0.45					
I IAIII	Insulation method	Photocoupler					
	Rated input voltage		24 VDC				
Input signal	Operating voltage range		to 26.4 VDC				
	Rated input current		mA TYP				
	Input impedance		4.7 kΩ				
	Insulation method		otocoupler				
	Rated load voltage		24 VDC				
Open collector	Operating load voltage range		OC to 26.4 VDC				
output signal	Maximum load current		80 mA				
	Leakage current		mA or less				
	Surge protection	0	Diode				
Contact output signal	Rated load voltage	48 VAC or le	ess/24 VDC or less				
(Alarm signal)	Maximum load current		OC (Resistance load)				
Contact output signal	Rated load voltage		ess/24 VDC or less				
(EMO signal)	Maximum load current		istance load/Inductive load)				
		Pin assi	gnment number 24 VDC output (Output from the thermo-chiller) 24 COM output (Output from the thermo-chiller) 24 VDC input (Supply from the user's equipment or thermo-chiller)*				
		4.7 kΩ 4.7 kΩ	24 COM input (Supply from the user's equipment or thermo-chiller)* Setting at the time of shipment from factory Custom function*2 Run/Stop signal Run/Stop signal 1 Run/Stop signal 2 Run/Stop signal 2 DIO REMOTE signal 1				
Circu	it diagram	4.7 kΩ 4.7 kΩ 4.7 kΩ Internal circuit	DIO REMOTE signal 2 Operation condition signal Warning signal Output signal 2				
			Fault signal Output signal 3 Remote signal Output signal 4 Temp ready signal Output signal 5				
		***************************************	5 18 Alarm signal Alarm signal				
		Emergency off [EMO] switch	13 25 EMO signal EMO signal				

^{*1} When using the power supply of the thermo-chiller, short circuit pins 1 and 2 and pins 14 and 15 respectively.

When using the power supply of the user's equipment, connect the lead wires to pins 2 and 15 and short circuit pins 14 and 15. Incorrect connections may cause a malfunction.

^{*2} The custom function is equipped for contact input/output. Using the custom function enables the user to set the signal type for contact input/output or pin assignment numbers. For details, please refer to the "Communication Specifications" information.

HRSH

Serial RS-485

The serial RS-485 enables the following items to be written and read out.

<Writing>

Run/Stop

Circulating fluid temperature setting Circulating fluid automatic recovery start/ stop*1

<Readout>

Circulating fluid present temperature

Circulating fluid flow

Circulating fluid discharge pressure

Circulating fluid electric resistivity*2


Alarm occurrence information

Status (operating condition) information


- *1 Only when the circulating fluid automatic recovery function (option Z) is selected.
- *2 Only when the DI control kit (option Y) is selected.

Item	Specifications
Connector no.	P2
Connector type (on this product's side)	D-sub 9 P type, Female connector
Fixing bolt size	M2.6 x 0.45
Standards	EIA RS485
Protocol	Modicon Modbus
Circuit diagram	To the thermo-chiller User's equipment side Value of the second of th

Connector Location

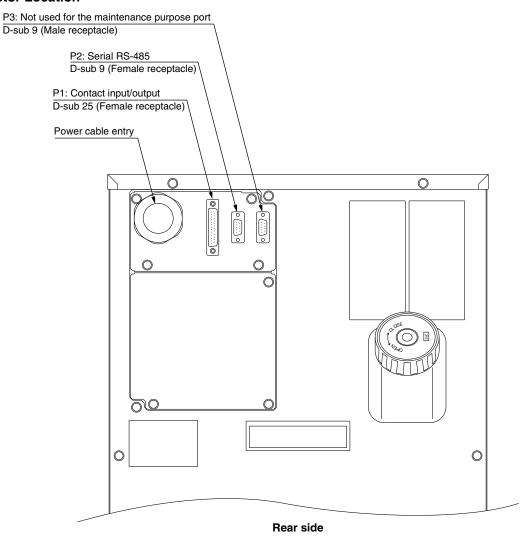

Operation Display Panel

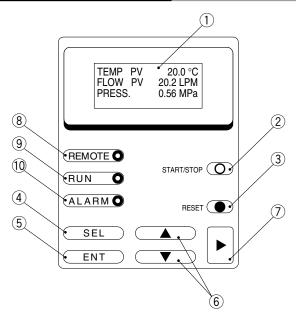

No.	Description	Function			
1	LCD	Operating condition of this unit/Circulating fluid discharge temperature/Circulating fluid flow/Circulating fluid discharge pressure/Setting value/Alarm message, etc. are displayed.			
2	[START/STOP] key	Starts/Stops the operation.			
3	[RESET] key	Stops the alarm buzzing. Resets the alarm.			
4	[SEL] key	Switches the display.			
(5)	[ENT] key	Decides the settings.			
6	[▲] [▼] key	Moves the cursor and changes the setting values.			
7	[▶] key	Moves the cursor.			
8	[REMOTE] lamp	Lights up when the unit is in the remote status.			
9	[RUN] lamp	Lights up when the unit is in the operating status.			
10	[ALARM] lamp	Lights up when the unit is alarming.			

Alarm

This unit can display 28 kinds of alarm messages as standard. Also, it can read out the serial RS-485 communication.


Alarm code	Alarm message	Operation status	Main reason
01	Water Leak Detect FLT	Stop	Liquid deposits in the base of this unit.
02	Incorrect Phase Error FLT	Stop	The power supply to this unit is incorrect.
03	RFGT High Press FLT	Stop	Pressure in the refrigeration circuit has exceeded the limitation.
04	CPRSR Overheat FLT	Stop	Temperature inside the compressor has increased.
05	Reservoir Low Level FLT	Stop	The amount of circulating fluid is running low.
06	Reservoir Low Level WRN	Continue	The amount of circulating fluid is running low.
07	Reservoir High Level WRN	Continue	Filling the circulating fluid too much.
08	Temp. Fuse Cutout FLT	Stop	Temperature of the circulating fluid tank is raised.
09	Reservoir High Temp. FLT	Stop	Temperature of the circulating fluid has exceeded the limitation.
11	Reservoir High Temp. WRN	Continue	Temperature of the circulating fluid has exceeded the limitation set by user.
12	Return Low Flow FLT	Stop	The circulating fluid flow has gone below 6 L/min.
13	Return Low Flow WRN	Continue	The circulating fluid flow has gone below the limitation set by user.
14	Heater Breaker Trip FLT	Stop	Protection device for the electric circuit of the heater is activated.
15	Pump Breaker Trip FLT	Stop	Protection device for the electric circuit of the circulating pump is activated.
16	CPRSR Breaker Trip FLT	Stop	Protection device for the electric circuit of the compressor is activated.
17	Interlock Fuse Cutout FLT	Stop	Overcurrent is flown to the control circuit.
18	DC Power Fuse Cutout WRN	Continue	Overcurrent has flowed to the (optional) solenoid valve.
19	FAN Motor Stop WRN	Continue	Cooling fan inside the compressor has stopped.
20	Internal Pump Time Out WRN	Continue	The internal pump continuously run for more than a certain period of time.
21	Controller Error FLT	Stop	The error occurred in the control systems.
22	Memory Data Error FLT	Stop	The data stored in the controller of this unit went wrong.
23	Communication Error WRN	Continue	The serial communications between this unit and user's system has been suspended.
24	DI Low Level WRN	Continue	DI level of the circulating fluid has gone below the limitation set by user. (Option)
25	Pump Inverter Error FLT	Stop	An error has occurred in the inverter for the circulating pump. The alarm is only for the HRZ010-W□S.
26	DNET Comm. Error WRN	Continue	The DeviceNet communications between this unit and user's system has been suspended. (Only for DeviceNet communication specification - option D)
27	DNET Comm. Error FLT	Stop	An error has occurred in the DeviceNet communication system of this unit. (Only for DeviceNet communication specification - option D)
28	CPRSR INV Error FLT	Stop	An error has occurred in the inverter for the compressor. The alarm is only for the HRZ010-W□S.



1) Bypass Piping Set

* Necessary to be fitted by user.

When the circulating fluid goes below the rated flow, cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set.

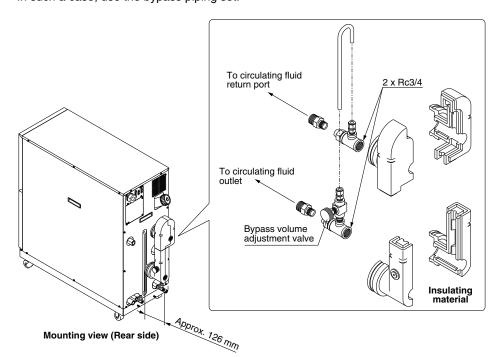


Part no.	Applicable model
HRZ-BP001	HRZ001-H/HRZ001-H1 HRZ002-H/HRZ002-H1
HRZ-BP002	HRZ001-L/HRZ001-L1 HRZ001-L2 HRZ002-L/HRZ002-L1 HRZ002-L2 HRZ004-L/HRZ004-L1 HRZ004-L2 HRZ008-L2 HRZ004-H/HRZ004-H1 HRZ008-H/HRZ008-H1 HRZ002-W/HRZ002-W1 HRZ008-W/HRZ008-W1 HRZ010-WS HRZ010-WS HRZ010-WS
HRZ-BP008	HRZ008-L/HRZ008-L1

2 Anti-quake Bracket

Bracket for earthquakes

Part no.	Applicable model		
	HRZ001-L□/HRZ002-L□/HRZ004-L□/HRZ008-L2		
UDZ TV000	HRZ001-H□/HRZ002-H□		
HRZ-TK002	HRZ004-H□/HRZ008-H□		
	HRZ002-W□/HRZ008-W□/HRZ010-W□S		

- * 2 pieces per set (for 1 unit) (HRZ-TK002)
- * Anti-quake bracket is attached as standard. (HRZ008-L, HRZ008-L1)

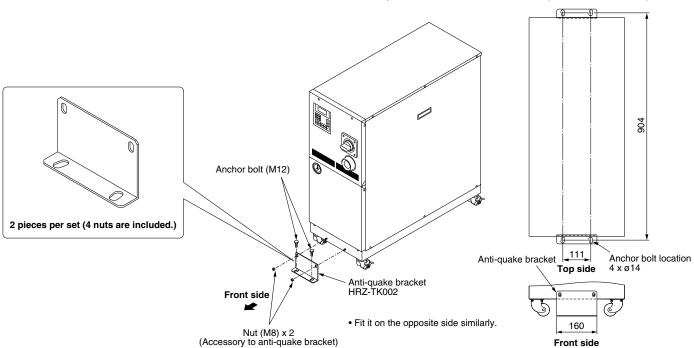

246

HRS

HRS100/150 HRS090

HRSH090

SE

_

HECR

HEC

HEB


HED

Technical Data

3 4-Port Manifold

4-branching the circulating fluid enables 4 temperature controls at the maximum with the 1 unit thermo-chiller.

Part no.	Applicable model
HRZ-MA001	Common for all models

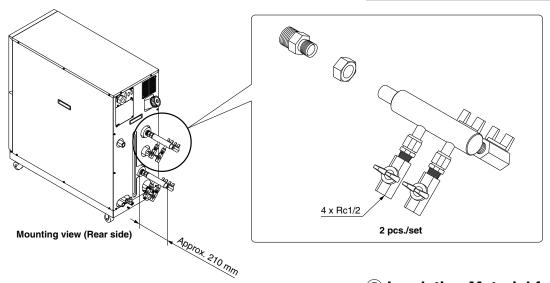


4 DI Filter

This is the ion replacement resin to maintain the electric resistivity of the circulating fluid.

Users who selected the DI control kit (option Y) need to purchase the DI filter separately.

Part no.	Applicable model		
HRZ-DF001	Common for all models which can select the DI control kit. (option Y)		

* The DI filters are consumable. Depending on the status (electric resistivity set value, circulating fluid temperature, piping volume, etc.), product life cycles will vary accordingly.

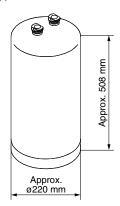


Weight: Approx. 20 kg

(5) Insulating Material for DI Filter

When the DI filter is used at a high-temperature, we recommend that you use this insulating material to protect the radiated heat from the DI filter or possible burns. When the DI filter is used at a low-temperature, we also recommend that you use this to prevent heat absorption from the DI filter and to avoid forming condensation.


Part no.	Applicable model		
HRZ-DF002	Common for all models which can select the DI control kit. (option Y)		



6 60% Ethylene Glycol Aqueous Solution

This solution can be used as a circulating fluid for ethylene glycol-type thermo-chillers. (Capacity: 10 L)


Part no.	Applicable model		
HRZ-BR001	Common for all ethylene glycol-type models		

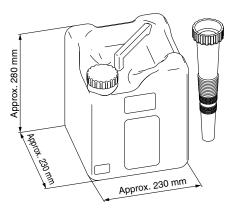

7 Concentration Meter

This meter can be used to control the condensation of ethylene glycol solution regularly.

Part no.	Applicable model	
HRZ-BR002	Common for all ethylene glycol-type models	

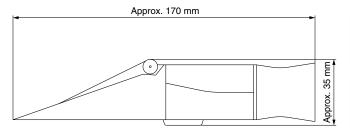

HEB

HRZ Series Options

* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.





In addition to the standard contact input/output signal communication and the serial RS-485 communication, analog communication function can be added

The analog communication function enables to write and read out the following items.

<Writing>

<Readout>

Circulating fluid temperature setting

Circulating fluid present temperature Electric resistivity*1

*1 Only when the DI control kit (option Y) is selected.

Scaling voltage - circulating fluid temperature can be set arbitrarily by user.


For details, please refer to our "Communication Specifications" information.





An adapter is included to change the connection parts of circulating fluid piping and facility water piping to NPT thread type. The adapter must be installed by user.





Device Net

■ Trademark

DeviceNet™ is a trademark of ODVA.

In addition to the standard contact input/output signal communication and the serial RS-485 communication, DeviceNet function can be added. DeviceNet function enables to write and read out the following items.

<Writing>

Run/Stop

Circulating fluid temperature setting Circulating fluid automatic recovery start/stop*1

<Readout>

Circulating fluid present temperature Circulating fluid flow

Circulating fluid discharge pressure


Electric resistivity*2

Alarm occurrence information Status (operating condition) information

- *1 Only when the circulating fluid automatic recovery function (option Z) is selected.
- *2 Only when the DI control kit (option Y) is selected.

For details, please refer to our "Communication Specifications" information.





The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only. If this option is not selected, a product with a unit selection function will be provided by default.

No change in external dimensions






Select this option if you want to maintain the electric resistance ratio (DI level) of the circulating fluid at a certain level. However, some components have to be fitted by user. For details, refer to specification table for this option.

Please note that this is not applicable to the fluorinated liquid type.

Applicable model		HRZ00□-L1-Y HRZ00□-H1-Y HRZ00□-W1-Y HRZ010-W1S-Y	HRZ00□-L2-Y HRZ010-W2S-Y	
Allowable circulating fluid	_	60% ethylene glycol aqueous solution	Deionized water	
DI level display range	MΩ·cm	0 to 20		
DI level set range	MΩ-cm	0 to 2.0*1		
DI level reduction alarm set range	MΩ·cm	0 to 2.0		

*1 The DI filter is needed to control the DI level. (SMC Part No.: HRZ-DF001)
Please purchase additionally because the DI filter is not included in this option. Also, if necessary, additionally purchase the insulating material for the DI filter. (SMC Part No.: HRZ-DF002)

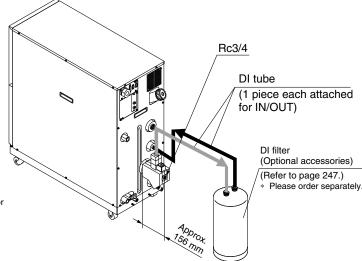

- * Install the DI filter outside the thermo-chiller for piping. Secure the space for installing the DI filter on the rear side of the thermo-chiller.
- * It may go outside of the temperature stability range of ±0.1°C when this option is used in some operating conditions.



Circulating Fluid Automatic Recovery

Circulating fluid automatic recovery

Select this option for users who want to use the circulating fluid automatic recovery function.


The automatic recovery function is a device which can recover the circulating fluid inside pipings into a sub-tank of the thermo-chiller by the external communication or operating display panel. Some components need to be fitted by user. For details, please refer to the "Product Specifications" information for these options.

Applicable model		HRZ001-H-Z HRZ001-H1-Z HRZ002-H-Z HRZ002-H1-Z	HRZ001-L-Z HRZ002-L-Z HRZ004-L-Z HRZ004-H-Z HRZ008-H-Z HRZ001-L2-Z HRZ004-L2-Z HRZ002-W-Z HRZ008-W-Z HRZ010-WS-Z HRZ010-W2S-Z	HRZ001-L1-Z HRZ002-L1-Z HRZ004-L1-Z HRZ004-H1-Z HRZ008-H1-Z HRZ002-L2-Z HRZ008-L2-Z HRZ002-W1-Z HRZ008-W1-Z HRZ010-W1S-Z	HRZ008-L-Z HRZ008-L1-Z
Circulating fluid recoverable volume*1	L	15	15 16 17		17
Purge gas	_	Nitrogen gas			
Purge gas supply port	_		Self-align fitting for O.D. ø8*2		
Purge gas supply pressure	MPa		0.4 to 0.7		
Purge gas filtration	μm		0.01 or less		
Regulator set pressure	MPa	0.15 to 0.3*3			
Recoverable circulating fluid temperature	°C	10 to 30			
Recovery start/stop	_	Start: External communication*4 or operation display panel/Stop: Automa			el/Stop: Automatic
Timeout error	sec	Timer from recovery start to completion Stops recovering when the timer turns to set time. Possible set range: 60 to 300, at the time of shipping from the factory: 300			time.
Height difference with the user system side	m	10 or less			

^{*1} This is the space volume of the sub-tank when the liquid level of the circulating fluid is within the specification. Guideline of the recovery volume is 80% of the circulating fluid recoverable volume.

*3 At the time of shipping from factory, it is set to 0.2 MPa.

^{*4} For details, please refer to our "Communication Specifications" information.

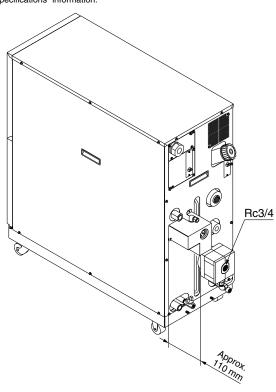

HRS090

HRSH090 HRS100/150

HRSH

I

HRZD

HRW

HECR

HEC

HEB

Technical Data



^{*2} Before piping, clean inside the pipings with air blow, etc. Use the piping with no dust generation by purge gas. When using resin tube, where necessary, use insert fittings, etc. in order not to deform the tubings when connecting to self-align fittings.



HRZ Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to page 383 for safety instructions and pages 384 to 387 for temperature control equipment precautions.

Design

⚠ Warning

- 1. This catalog shows the specifications of a single unit.
 - For details, please refer to our "Product Specifications" and thoroughly consider the adaptability between the user's system and this unit.
 - Although the protection circuit as a single unit is installed, the user is requested to carry out the safety design for the whole system.

Selection

⚠ Caution

1. Model selection

In order to select the correct thermo-chiller model, the amount of thermal generation from the user's system, the operating circulating fluid, and its circulating flow are required. Select a model, by referring to the guideline to model selection on page 227.

2. Option selection

Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

Handling

⚠ Warning

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep this manual available whenever necessary.

Operating Environment/Storage Environment

- 1. Do not use in the following environment because it will lead to a breakdown.
 - 1. Environment like written in "Temperature Control Equipment Precautions."
 - Locations where spatter will adhere to when welding.
 - Locations where it is likely that the leakage of flammable gas may occur.
 - Locations where the ambient temperature exceeds the limits as mentioned below.

During operation 10°C to 35°C

During storage 0°C to 50°C (but as long as water or circulating fluid are not left inside the pipings)

5. Locations where the ambient relative humidity exceeds the limit as mentioned below.

During operation 30% to 70%

During storage 15% to 85%

- (Inside the operation facilities) locations where there is not sufficient space for maintenance.
- In locations where the ambient pressure exceeds the atmospheric pressure.
- The Thermo-chiller does not have clean room specification. It generates dust from the pump inside the unit and the cooling fan for the unit inside.

Circulating Fluid

⚠ Caution

 Avoid oil or other foreign matter entering the circulating fluid.

Circulating Fluid

- 2. Use ethylene glycol that does not contain additives such as preservatives.
- 3. The condensation of ethylene glycol aqueous solution must be 60% or less. If the density is too high, the pump will be overloaded, resulting in occurrence of "Pump Breaker Trip FLT." Also, if the density is to low, the unit will freeze at lower temperatures, resulting in product failure.
- 4. Avoid water moisture entering the fluorinated fluid. Otherwise, the unit will freeze, resulting in product failure.
- 5. Use tap water (including for diluting ethylene glycol aqueous solution) which must meet the water quality standards as mentioned below.

Tap Water (as Circulating Water) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulating type – Supply water"

				Influ	ence
	Item	Unit	Standard value	Corrosion	Scale generation
	pH (at 25°C)	_	6.0 to 8.0	0	0
_	Electric conductivity (25°C)	[µS/cm]	100*1 to 300*1	0	0
Standard item	Chloride ion (Cl ⁻)	[mg/L]	50 or less	0	
5	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	50 or less	0	
nda	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		0
Stal	Total hardness	[mg/L]	70 or less		0
	Calcium hardness (CaCO ₃)	[mg/L]	50 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	30 or less		0
_	Iron (Fe)	[mg/L]	0.3 or less	0	0
ite	Copper (Cu)	[mg/L]	0.1 or less	0	
Se Se	Sulfide ion (S ₂ ⁻)	[mg/L]	Should not be detected.	0	
Reference item	Ammonium ion (NH ₄ +)	[mg/L]	0.1 or less	0	
- Sefe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.



HRZ Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to page 383 for safety instructions and pages 384 to 387 for temperature control equipment precautions.

Facility Water Supply

⚠ Warning

<Water-cooled refrigeration>

 The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.

Prepare the facility water system that satisfies the facility water specifications below.

2. When using tap water as facility water, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below.

<Tap Water (as Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Circulating water"

				Influence	
Item		Unit Standard value		Corrosion	Scale generation
	pH (at 25°C)	_	6.5 to 8.2	0	0
_	Electric conductivity (25°C)	[µS/cm]	100*1 to 800*1	0	0
item	Chloride ion (CI-)	[mg/L]	200 or less	0	
	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	200 or less	0	
Standard	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		0
tar	Total hardness	[mg/L]	200 or less		0
0)	Calcium hardness (CaCO ₃)	[mg/L]	150 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	50 or less		0
_	Iron (Fe)	[mg/L]	1.0 or less	0	0
iter	Copper (Cu)	[mg/L]	0.3 or less	0	
e G	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected.	0	
l e	Ammonium ion (NH ₄ +)	[mg/L]	1.0 or less	0	
Reference item	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
œ	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.001 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Set the supply pressure between 0.3 to 0.7 MPa. Ensure a pressure difference at the facility water inlet/outlet of 0.3 MPa or more.

If the supply pressure is high, it will cause water leakage. If the supply pressure and pressure difference at the facility water inlet/outlet is low, it will cause an insufficient flow rate of the facility water, and poor temperature control.

Transportation/Carriage/Movement


⚠ Warning

1. Transporting with forklift

- 1. It is not possible to hang this product.
- The fork insertion position is either on the left side face or right side face of the unit. Be careful not to bump the fork against a caster or level foot and be sure to put through the fork to the opposite side.
- 3. Be careful not to bump the fork to the cover panel or piping ports.

2. Transporting with casters

- This product is heavy and should be moved by at least two people.
- 2. Do not grip the pipings on the rear side or the handles of the panel.

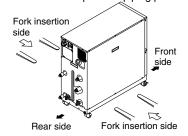

Mounting/Installation

⚠ Caution

- 1. Avoid using this product outdoors.
- 2. Install on a rigid floor which can withstand this product's weight.
- 3. Install a suitable anchor bolt for the anti-quake bracket taking into consideration the user's floor material.
- 4. Avoid placing heavy objects on this product.

Piping

⚠ Caution

- Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.
 If the operating performance specifications are regularly exceeded, the pipings may burst during operation.
- 2. The surface of the circulating fluid pipings should be covered with the insulating materials which can effectively confine the heat.

Absorbing the heat from the surface of pipings may reduce the cooling capacity performance and the heating capacity may be shortened due to heat radiation.

3. When using fluorinated liquid as the circulating fluid, do not use pipe tape.

Liquid leakage may occur around the pipe tape. For sealant, we recommend that you use the following sealant: SMC Part No., HRZ-S0003 (Silicone sealant)

4. For the circulating fluid pipings, use clean pipings which have no dust, oil or water moisture inside the pipings, and blow with air prior to undertaking any piping works.

If any dust, oil or water moisture enters the circulating fluid circuit, inferior cooling performance or equipment failure due to frozen water may occur, resulting in bubbles in the circulating fluid inside the tank.

- 5. The reciprocating total volume of the circulating fluid pipings must be less than the volume of the sub-tank. Otherwise, when the equipment is stopped, the in-built alarm may activate or the circulating fluid may leak from the tank. Refer to the specifications table for the sub-tank volume.
- 6. Select the circulating fluid pipings which can exceed the required rated flow.

For the rated flow, refer to the pump capacity table.


- 7. For the circulating fluid piping connection, install a drain pan just in case the circulating fluid may leak.
- 8. Do not return the circulating fluid to the unit by installing a pump in the user system.

Electrical Wiring

⚠ Caution

- 1. Power supply and signal cable should be prepared by user. Voltage
- 2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 μ sec., it may result in malfunction.



06

HRS100/150 HRS090

HRSH090

SE

HRSH

HRZ

HR

HECR T

HEC

HEB

HED

Fechnical Data





HRZ Series Specific Product Precautions 3

Be sure to read this before handling the products. Refer to page 383 for safety instructions and pages 384 to 387 for temperature control equipment precautions.

Electrical Wiring

⚠ Caution


3. This product is installed with a breaker with the following operating characteristics.

For the user's equipment (inlet side), use a breaker whose operating time is equal to or longer than the breaker of this product. If a breaker with shorter operating time is connected, the user's equipment could be cut off due to the inrush current of the motor of this product.


Breaker Operating Characteristics

Applicable model

HRZ001-L HRZ001-H HRZ002-L HRZ002-H HRZ004-L HRZ004-H HRZ001-L1 HRZ008-H HRZ002-L1 HRZ001-H1 HRZ004-L1 HRZ002-H1 HRZ001-L2 HRZ004-H1 HRZ002-L2 HRZ008-H1 HRZ004-L2 HRZ008-W HRZ008-L2 HRZ008-W HRZ008-W1

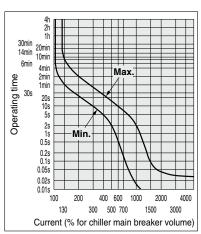

HRZ008-L HRZ008-L1 HRZ010-WS HRZ010-W1S HRZ010-W2S

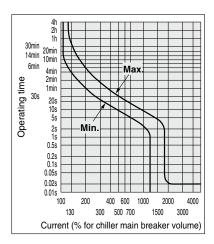

Operation

- 1. Confirmation before operation
 - The circulating fluid should be within the specified range of "HIGH" and "LOW."
 - Be sure to tighten the cap for the circulating fluid port until the click sound is heard.

2. Emergency stop method

In the case of an emergency, press down the EMO switch which is fitted on the front face of this product.

Operation Restart Time/Operation and Suspension Frequency

A Caution

- Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.
- 2. Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

Maintenance

Marning

- Do not operate the switch with wet hands or touch electrical parts such as an electrical plug. This will lead to an electrical shock.
- 2. Do not splash water directly on this product for cleaning. This will lead to an electrical shock or a fire.
- 3. When the panel was removed for the purpose of inspection or cleaning, mount the panel after works were done.

If the panel is still open, or running the equipment with the panel removed, it may cause an injury or electric shock.

⚠ Caution

- 1. In order to prevent a sudden product failure of the unit, replace the replacement parts every 36 months.
- 2. Perform an inspection of the circulating fluid every 3 months.
 - In the case of fluorinated fluids:
 Discharge the circulating liquid and avoid any dirty objects,
 or water moisture, or foreign matter entering the system.
 - 2. In the case of ethylene glycol aqueous solution: Maintain the condensation at 60%.
 - In the case of tap water, deionized water: Replacement is recommended.
- 3. Check the water quality of cooling water every 3 months.

Regarding the water quality standards for cooling water, refer to "Temperature Control Equipment Precautions."

■ Refrigerant with GWP reference

	Global warming potential (GWP)			
Refrigerant	Regulation (EU) No 517/2014 (Based on the IPCC AR4)	Revised Fluorocarbons Recovery and Destruction Law (Japanese law)		
R134a	1,430	1,430		
R404A	3,922	3,920		
R407C	1,774	1,770		
R410A	2,088	2,090		

- * This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.
- See specification table for refrigerant used in the product.

