

POBCO Sanitary Guide Rails


Styles Include: All Plastic UHMW, Stainless Rod Encapsulated in Polyethylene, and UHMW/Stainless Bottom for welding.

1/2" ROD	ROUND TOP		ROUND TOP WITH ROD
<p>GRA-0808-SS See 1/2" Round Support Rod on Page 9 MOST SANITARY</p>	<p>Ultra-D UHMW GRU-100 Plus Oil-Filled UHMW GRP-100 Anti-Static Black UHMW GRSD-100 [Fits over 3/8" Rod]</p>	<p>GRA-ROUND</p>	<p>Ultra-D UHMW GRU-100SS Plus Oil-Filled UHMW GRP-100SS Anti-Static Black UHMW GRSD-100SS</p>

ALL PLASTIC RAIL	ROUND TOP		
<p>GRA-1008 All Plastic</p>	<p>GRA-1008-SS</p>	<p>GRA-109SS</p>	<p>#GRA-109-SS Conveyor Bed Supports</p>
<p>304 S.S. Rod Encapsulated in Polyethylene Plastic MOST SANITARY</p>			

FLAT TOP RAIL FITS #60 ANSI ROLLER CHAIN

<p>GRA-CONVEX</p>	<p>GRA-1008-SSF</p>	<p>GRA-FLAT</p>

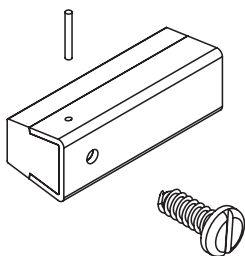

When POBCO Guide Rail with S.S. Bottoms are used as a wear strip, the plastic insert should be fastened to the metal sheath at the leading end of the rail. Using a sheet metal screw through the back of the sheath or a heavy wire pin from the side should be adequate. This will prevent the insert from sliding within the sheath in the event the chain accidentally catches on a leading edge. This also allows for thermal expansion and contraction of the plastic insert.

Stainless Steel Round Rods
 1/4" diameter – 1/4RoundSSL144
 1/2" diameter – 1/2RoundSSL144
 3/8" diameter – 3/8RoundSSL144