

RAFIX 22 FS⁺, emergency stop, reset by rotating, arrows white



fields of application

- > Measurement-control-regulation
- > Electrical engineering
- > Mechanical and system engineering
- > Vehicle construction
- > Handheld terminals
- > Industrial robots

special features

- > Not-Halt in klassischer Bauform
- Geringe Einbautiefe 9,2 mm (PCB) bzw. 27 mm (QC)
- Anschlussarten: Leiterplattenanschluss (PCB) oder Steckanschluss (QC)
- Die PCB-Schaltelemente minimieren Montagefehler
- Schaltelemente mit Silberkontakten (max. 250 V/4 A) oder Goldkontakten (max. 35 V/100 mA)
- > Schutzgrad: IP 65 frontseitig



description

RAFIX control components are defined by RAFI as modular elements, including of actuator element, coupling if necessary and individual contact or lighting element.

Actuators (such as pushbuttons, emergency-stop pushbuttons, etc.) have the specified tactility, reset and general function only in combination with the appropriate contact elements.

The emergency stop buttons correspond to IEC 60 947 and VDE 0113 Part 1. Thanks to a forcibly actuated mechanical motion sequence, they are dupe-proof in accordance with DIN EN ISO 13850. In order to prevent unintentional actuation, a tactile feedback must be overcome. The key switch locks into the pressed position.

The design of the actuator protects the emergency stop button from interlocking. This means that an initiated emergency stop procedure cannot be interrupted by jamming objects.

Only use with the emergency stop switching element.

The illuminated version is illuminated through a central round window.

technical data

| > | general | | |
|---|-----------------------------|--------|-----------------|
| | illuminated | No | direct links |
| | Legending color | white | > RAFI eCatalog |
| | Bezel color | red | |
| | Collar shape | round | |
| | Operating temperature, min. | -25 °C | |
| | Operating temperature, max. | 70 °C | |

The information in this data sheet only contains general descriptions and / or performance features, which may not apply precisely as described to the respective application, and which my change due to further product enhancements. The technical data, illustrations and other information about our products are the mere results of individual technical testing. These descriptions and other product features are only binding if they expressly agreed upon at the time of the conclusion of a binding contract. In all other cases, we reserve the right to make technical changes as well as changes of availability. Pictures and other graphic illustrations are approximations only. All product names may be trademarks or brand names of the RAFI Group or any other sub-supplier of RAFI. The use of such by any third parties for their own purposes may infringe the rights of the respective entity holding those rights. **date**: May 18, 2020 **page**: 1/4

RAFI GmbH & Co. KG

Ravensburger Str. 128-134 88276 Berg / Ravensburg Germany www.rafi.de, info@rafi.de technical data sheet

1.30.273.501/0300



| | Storage temperature, min. | -40 °C | | | |
|---|--|----------------|--|--|--|
| | Storage temperature, max. | 80 °C | | | |
| | Packaging | Box | | | |
| | Packaging unit | 2 pcs. | | | |
| | net weight | 16.9 g | | | |
| | Environment resistance | IEC 60068-2-14 | | | |
| | | IEC 60068-2-30 | | | |
| | | IEC 60068-2-33 | | | |
| | | IEC 60068-2-78 | | | |
| | Operating life | 50,000 Cycles | | | |
| | B10 | 65,000 Cycles | | | |
| | Degree of protection, front side, according to DIN EN 60529 | IP65 | | | |
| | UL Enclosure Type Rating front | type 1 | | | |
| | side | type 4X | | | |
| | Salt-spray resistance according to | IEC 60068-2-11 | | | |
| | standard | | | | |
| | RoHS compliant | Yes | | | |
| | REACH compliant | Yes | | | |
| | Demontage möglich | No | | | |
| | SAP MOQ order | 2 | | | |
| > | mounting diameters | | | | |
| | Mounting hole | 22.3 mm | | | |
| | Mounting depth | 9.2 mm | | | |
| | Installation height | 33.2 mm | | | |
| | Grid, min. | 35 x 35 mm | | | |
| | Outside dimension, length | 29.8 mm | | | |
| | Outside dimension, width | 29.8 mm | | | |
| | Outside dimension, height | 42.1 mm | | | |
| | Collar dimension | ø 29,8 mm | | | |
| > | mechanical data | | | | |
| | Actuation function | latching | | | |
| | Operating force, max. | 100 N | | | |
| | Resetting | by rotating | | | |
| | Fixing | Threaded ring | | | |
| | Threaded ring torque, max. | 1.2 Nm | | | |

RAFI GmbH & Co. KG


Ravensburger Str. 128-134 88276 Berg / Ravensburg Germany www.rafi.de, info@rafi.de technical data sheet

1.30.273.501/0300




drawings

System drawing

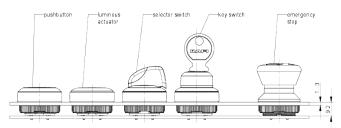


Mounting hole drawing

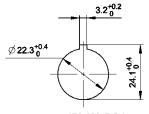


acc. to IEC 60947-5-1

System drawing

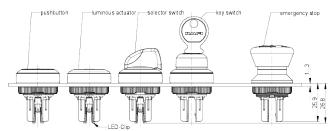

front panel drawing

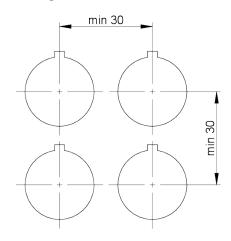

The information in this data sheet only contains general descriptions and / or performance features, which may not apply precisely as described to the respective application, and which my change due to further product enhancements. The technical data, illustrations and other information about our products are the mere results of individual technical testing. These descriptions and other product features are only binding if they expressly agreed upon at the time of the conclusion of a binding contract. In all other cases, we reserve the right to make technical changes as well as changes of availability. Pictures and other graphic illustrations are approximations only. All product names may be trademarks or brand names of the RAFI Group or any other sub-supplier of RAFI. The use of such by any third parties for their own purposes may infringe the rights of the respective entity holding those rights. **date:** May 18, 2020 **page:** 3/4

RAFI GmbH & Co. KG

Ravensburger Str. 128-134 88276 Berg / Ravensburg Germany www.rafi.de, info@rafi.de

technical data sheet

1.30.273.501/0300



mounting

| LUMOTAST 22, RAFIX 22 FS ⁺ | | | | | | |
|---|--|---|--|--|--|--|
| | ctions EMERGENCY STOP anslation of the source text) | Mode d'emploi auxiliaires de commande d'ARRÊT D'URGENCE (Traduction original) | | | | |
| Sicherheitshinweise Vor Inbahlehamin bit te Batilebsanlielung sorgfälig kesen. Not Halt Belehagentie erfölen eine Personerschutz-Funktion. Unsachgemäßer Einbau, soc Widtige Anwendung oder Manipulationen können zu schweren Verletzungen von Person Törren! Not-Halt Belehägentie dürfen nicht umgangen, entlemt oder auf andere. Weise unwrisa gemacht werden! Vor Beginn der Installation Anlage und Gerit spannungsfrei schalten! Vor Einstinbetriehnehme der Maschine oder Anlage Not-Halt. Belehägentit durch Testbettiligu auf korrekte Norräge und Türkken Depryction. Not-Halt-Belehägentie mit sichtbaren Beschädgungen sind unverzüglichauszulauschen. Not-Halt-Eurktion darf nicht als Ersatz für Schutzmäßnahmen oder andere. Scherheitsfur Lonen verwendet werden. Not-Halt-Eurktion darf nicht beeinträchtigen. Not-Halt-Eurktion darf die Wirksamkeit von Schutzeinrichaungen oder von Einrichtungen n anderen Scherheitsfurktionen nicht beeinträchtigen. Belehytigstratetions Please read the operang instructions auferführt prior to use. EMERGEVEV STOP certrel units are designed to protect persons. Insporproriate installation instructions | Les auxiliaires de command troméaniques pour protége wéhoules et les installations, les risques de dommages co- m Pour la mise en service, l'util suivantes: - La drective sur les machin - Les réglements de sécurit - Les instructions aur la prév C'est aux fabricants et util k- D'URGENCE sont utilisés, q des prescriptions et réglement des prescriptions et réglement de | ention des accidents / règlements de sécurité isateurs de machines où des auxiliaires de commande d'ARRÉI L'Incombe la responsabilité du respect du mode d'emploi ainsi que | | | | |
| Improper use or inadmissible manipulation may result inservere injuries! EMERGENCY STOP control units must never be bypassed, removed or disabled in any oth way! Disconnect the power supply to the machinery and device prior to installation! Operate the EMERGENCY STOP control unit to test and verify proper installation and function prior to Hild starts up of the machine or line. An EMERGENCY STOP control unit with an obvious defect must be replaced immediately. The emergency stop function is not to builded for safety measures or safety functions. | 3. Produk to esch reibung Autbau: Die Not-Halt-Belehé oder mehreren Schaltelemer einem Geháluse verbaut. Die Betätigung erfolgt durch: | sgeräte bestehen aus einer Kontoination von Betätigern mit einen niten. Die Not-Halt-Betehlageräte gibt es als Enbauversion oder in Drücken, die Entriegelung enfolgt je nach Variante entweder durch: drüungen nach links oder nach nechts igungsrichfung. | | | | |
| The emergency step function must not compromise the effectiveness of safety devices devices with other safety functions. Consignes desécurité If faut scigneusement fre le mode d'emploi avant la mise en service. Les auxiliares decommande d'ARIÉT D'URGENCE remplissent une fonction de protection pouve sonnelle. Un montage inapproprié, une application contra-indiquée ou une manipulation pouve | Design: An EMERGENCY ST contact blocks. EMERGENC installed in a separate housin They are operated by pressin They are operated by pressin - Turning in either direction | g. Unlatching is done by one of two methods: | | | | |
| causer des blessures corporeiles graves ! Il est interdit de protect, d'enlever ou de rendre inopérants les auxiliaires de commande d'ARRI DURGENCE! | O | ssoirs d'ARRÉT D'URGENCE sont composés d'une combinaise | | | | |

Structure: Les boutons-poussoirs d'ARRÉT D'URGENCE sont composés d'une combinaison d'actionneurs ou de plusieurs éléments de commutation. Les boutons-pousairs d'ARRÉT D'URGENCE sont disponibles en version intégrable ou instaliés dans un boitier. L'actionnement s'effectue par appui sur ces demiers. Selon la variante, le déverrouilla de s'effectue

soit par Un mouvement de rotation dans les deux directions, soit vers la gauche, soit à droite

Soit en tirant dans la direction opposée de la direction d'actionnement

| Produkt Einbau Ømm Product Mounting Ømm Produit Montag e Ømm | | Betäfiger Actuator Actionneur | S chaitelement C ontact block Elément de c ommutation |
|--|-------|--|--|
| LUMOTAST 22 | @22,3 | 1.15.105.001/0000 1.15.105.011/0000 1.15.105.021/0000 1.15.105.031/0000 | integriert/incl. |
| BAFIX22FS ⁺ | @22,3 | 1 30 273 300 Ø200 1 30 273 300 Ø200 1 30 273 300 Ø20 1 30 273 500 Ø300 1 30 273 500 Ø300 | 1.20.126.4xx 1.20.126.5xx 1.20.126.6xx 1.20.126.7xx |

werden

EN ISO 13848-2:2012 - EN 60204-1/A1:2009

other equipment in order to a void or reduce risks or damage to man and machine.

without limitation:

sible for ensuring that the operating instructions are observed and the applicable safety standards

and rules complied with

For the installation and operation of EMERGENCY STOP control devices in line with the intended For the instantial of a 3 operation of lower hat hat hat hat the bond of a session of the way has needed as a session of the session of the performed. E NISO 13848-1-2015 - ENISO 13850-2008 - ENISO 13848-2:2012 - ENE0204-1/A1.2009

Tabelle 3.1 Weitere technische Daten sind dem Katalog zu entnehmen.

(III) Table 3.1 For additional technical data, please refer to the catalogue

Tableau 3.1 Pour les autres caractéris figues techniques, voir catalogue

The information in this data sheet only contains general descriptions and / or performance features, which may not apply precisely as described to the respective application, and which my change due to further product enhancements. The technical data, illustrations and other information about our products are the mere results of individual technical testing. These descriptions and other product features are only binding if they expressly agreed upon at the time of the conclusion of a binding contract. In all other cases, we reserve the right to make technical changes as well as changes of availability. Pictures and other graphic illustrations are approximations only. All product names may be trademarks or brand names of the RAFI Group or any other sub-supplier of RAFI. The use of such by any third parties for their own purposes may infringe the rights of the respective entity holding those rights. ${\rm date}\colon {\rm May}$ 18, 2020 $~{\rm page}\colon 4/4$

RAFI GmbH & Co. KG

Ravensburger Str. 128-134 88276 Berg / Ravensburg Germany www.rafi.de, info@rafi.de



⚠ Avant la première mise en service de la machine ou de l'installation, contrôler l'auxiliaire de commande d'ARRÉTO' URGENCE quant aumontage et à un fonctionnement corrects. ⚠ ⚠

 \wedge

⚠

Les auxiliaires de commande d'ARRÉT D'URGENCE présentant des dommages visibles sont à remplacer sans tarder. La fonction d'arrêt d'urgence ne peut pas être utilisée en remplacement de mesures de protec-

Les cu d'autres fonctions de sécurité. La fonction d'arrêt d'urgence ne peut pas entraver l'efficacité de depositifs de sécurité ou de dispositifs possidant d'autres fonctions de sécurité

2. Allgemeine Beschreibung und bestimmungsgemäße Verwendung Not-Halt-Belehisgeräte sind elektromechanische Schaltgeräte zum Schutz von Personen. Sie 2 Allger

denen der schneifen Abschaltung um Maschinen, Fahrzeuge und Anlagen in einen sicheren Zu-stand zu bringen, um Gefahren und Schäden für Mensch und Maschine zu vermeiden oder zu verringern

Tir die inbetriebnahme, den Einsatz und technischen Überprüfungen geiten im speziellen folgen de Verschriften:

Die Maschinenrichtlinie 2006/42/EG

Die Sicherheitsvorschriften sowie Die Unfallverhötungsvorschriften / Sicherheitsregein

Hersteller und Benutzer von Maschinen, an denen Not-Halt-Befehlsgeräte eingesetzt werden, tragen die Verantwertung für die Beachtung der Betriebsanleitung, wie auch für die Einheltung der für sie geltenden Scherheitsvorschriften und regeln.

Für den Einbau und Betrieb von Not-Halt-Befehisgeräten müssen zur bestimmungsgemäßen wertung durchgeführt Verwendung folgende Anforderungen beachtet und eine Gefahrenbe

EN ISO 13849-1:2015 - EN ISO 13850:2008

(2. General description and intended use

EMERGENCY STOP control units are electromechanical switching devices designed to protect parsons. They are used for instant disconnection to achieve a safe status of machines, vehicles or

The following standards and regulations apply to their start-up, use and technical inspections,

Machinery Directive 2006/42/EC

Salety standards

Accident prevention regulations / rules for safety

Manufacturers and users of machines provided with EMERGENCY STOP control units are respon