Exhaust Cleaner

AMC Series



Ensures clean plant air and reduces noise pollution; Over 35 dB (A) noise reduction Over 99.9% oil mist removal

How to Order AMC 06 Size Suffix Thread • Port size Size Symbol Size Symbol Symbol Туре Note Symbol Type Symbol Type Size 1/4 std. 6 1 std. Nil Thread type Male thread 8 11/2 std. 3/8 std. 02 Female 1/4 **B**⁽²⁾ Shipped together Symbol With bracket Female thread 3/4 std. 9 2 std. Female (Not assembled) Nil R, Rc 03 3/8 Note 1) Female thread: Available Male **D**⁽³⁾ Ν NPT Drain piping only AMC220, 320, 520. 04 Female 1/2 F G **Specifications** Female Indicate BD when combining. 06 3/4 Fluid Compressed air Male Note 2) Not applicable to AMC810 and 910 Ambient and fluid temperature 5 to 60°C * 10 Male 1 Note 3) Without a valve function Inlet pressure 0.1 MPa or less 14 Male 11/2 Noise reduction 35 dB or more 20 Male Oil mist removal 99.9% or more Filtration 0.3 μm (Trapping efficiency: 95%) **Exhaust of oil mist** Drain cock (Standard) Drain piping Bracket * Option * It can operate in temperatures between -10 to 60°C if there is no risk of freezing the moisture in the air. ** Bracket not available on AMC810 and 910. Refer to page 829 for Specific Product Precautions.

Model/Male Thread Type


Specifications Model	AMC310	AMC510	AMC610	AMC810	AMC910	
Effective area (mm ²)	16	55	165	330	550	
Sonic conductance C [dm ³ /(s·bar)]	3.2	11	33	66	110	
Max. air flow (L/min (ANR))	300	1,000	3,000	6,000	10,000	
Port size	3/8	3/4	1	11/2	2	
Weight (kg)	0.2	0.5	0.7	1.2	1.7	
Element part no.	AMC-EL3	AMC-EL5	AMC-EL6	AMC-EL8	AMC-EL9	
Bracket part no. Note)	BE30	BE50	BE60	-	-	

^{*} ANR: 20°C atmospheric pressure, relative humidity 65%

How to Select Condition: At operating pressure 0.5 MPa

Select a model according to the air consumption of the circuit to be used.

- 1. Obtain the air consumption of the actuator to be used. However, if an exhaust cleaner of the centralized piping type will be used, sum the air consumption of the actuators that operate simultaneously.
- 2. Select a model that provides a maximum processing flow volume that exceeds the consumption volume obtained in step 1.

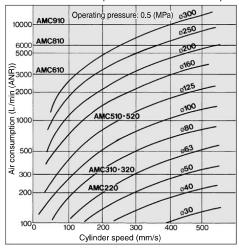

Model/Female Thread Type


medelli emale imeda iype									
Specifications Model	AMC220	AMC320	AMC520						
Effective area (mm ²)	12	16	55						
Sonic conductance C [dm ³ /(s·bar)]	2.4	3.2	11						
Max. air flow (L/min (ANR))	200	300	1,000						
Port size	1/4	1/4, 3/8	1/2,3/4						
Weight (kg)	0.12	0.2	0.5						
Element part no.	AMC-EL2	AMC-EL3	AMC-EL5						
Bracket part no. Note)	BE20	BE30	BE50						

^{*} ANR: 20°C atmospheric pressure, relative humidity 65%

Note) With 3 mounting screws

Flow Rate Characteristics (Initial conditions)

How to read the graph: If the AMC510 is operated at a flow volume of 1000 L/min (ANR), the inlet pressure will be 0.05 MPa.

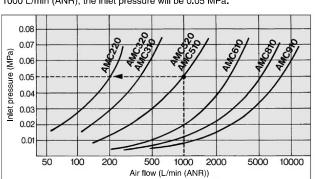

AN AMC AMV


AMP **SFE**

Note) With 3 mounting screws

AMC Series

Construction/Dimensions


Male thread

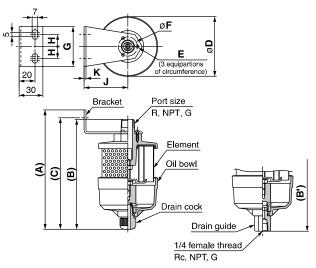

Drain piping type

	(min)																
	D		В			Mounting bracket							Drain piping				
Model	Port	Α	, P				С	D	IVI	ouri	urig	Dia	Kei			В	
	size		R NPT	G			Е	F	G	Н	J	K	Rc	NPT	G		
AMC310	3/8	151	139	134	141	75	M3 x 0.5 Depth 8	24	50	15	55	2.3	14	12	137		
AMC510	3/4	204	197	189	194	102	M4 x 0.7 Depth 10	40	70	20	70	3.2	200		192		
AMC610	1	230	225	217	220	118	M4 x 0.7 Depth 10	48	70	20	80	3.2	228		220		
AMC810	1 1/2	_	270)	_	135	-	_	_	_	_	_	- 273				
AMC910	2	_	327	7	_	153	_	_	_	_	_	_	330				

Female thread

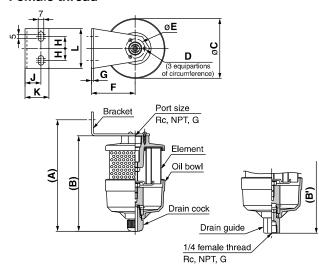



Drain piping type

(mm)												nm)			
Model	Port size	А	В	c Mounting		Mounting bracket							Dra	in pip B'	ing
	Size				D	Е	F	G	Н	J	K	L	Rc	NPT	G
AMC220	1/4	100	88	56	M3 x 0.5 Depth 8	22	40	2.3	15	12	20	50		91	
AMC320	1/4,3/8	141	121	75	M3 x 0.5 Depth 8	24	55	2.3	15	20	30	50	124		
AMC520	1/2,3/4	194	174	102	M4 x 0.7 Depth 10	40	70	3.2	20	20	30	70		177	

How to Order Oil Bowl Assembly

If the oil case becomes damaged, it can be replaced easily.

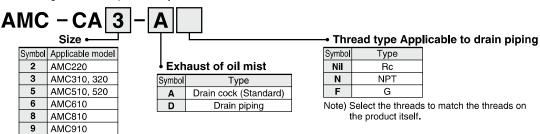

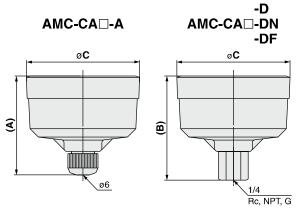

Drain cock

Drain piping type

* Without a valve function

			(mm)
Body size	Α	В	С
2	56	59	56
3	66	69	75
5	83	86	102
6	96	99	118
8	96	99	135
9	116	119	153





AMC Series Exhaust Cleaner Special Product Precautions

Be sure to read this before handling the products.

Design

△Warning

- The exhaust port could become blocked by the clogging of the exhaust cleaner.
 - Therefore, make sure to provide a safe design so as not to cause the whole system to malfunction.
- 2. If compressed air exhausted from the solenoid valve is not clean clogging may occur,
- 3. Operate at a back pressure (inlet pressure) of 0.1 MPa or less.

Selection

⚠ Caution

- Select an exhaust cleaner which is able to dispose of the maximum allowable flow capacity of compressed air exhausted from solenoid valve.
 - If the flow exceeds the maximum allowable flow for the exhaust cleaner, drainage and oil may be sprayed into the environment causing damage to equipment.
- Select a model which has a bigger effective area than that of the solenoid valve (including compound effective area).
- If this will be used with a centralized piping system, calculate the peak maximum air consumption by including the actuators that operate simultaneously and the capacity of the piping that is connected.

Then, select a model so that the calculated value will be less than the maximum flow volume of the exhaust cleaner. (Select a type with ample capacity because the exhaust speed will decrease when the element becomes clogged.)

Mounting

⚠ Caution

- Make sure not to apply a lateral load to the body during or after the installation.
- Take precautions so that the piping load is not be applied to the main body.

The attached bracket is for supporting the exhaust cleaner body only. Thus, it cannot support the piping or other items. If these items need to be supported, provide an additional support.

3. Exhaust cleaner must be mounted vertically.

If it is mounted diagonally, laterally, or inverted, the oil that is separated by the element will splash on the surroundings.

Maintenance

Caution

- If the exhaust speed drops and the system performance decreases due to clogging, replace with a new element. Make sure to verify the operating condition of the actuator at least once a day.
- 2. The replacement interval for the element is when the internal pressure during exhaust reaches 0.1 MPa or after 1 year operation, whichever comes first.
- Provide a branch on the inlet side of the exhaust cleaner to mount a valve and a pressure gauge.
- During inspection, open the valve and check the pressure at the time of exhaust discharge.
 (The valve must remain closed except for inspection. The pressure gauge could break if the valve remains open.)
- 3. If impact or vibration is applied to the product during installation, transport, or use, the oil bowl may come loose. Be sure to check whether the bowl has loosened at all before use.

AN

AMC

AMV

AMP

SFE



EXHAUST CLEANER SERIES NAMC




TECHNICAL SPECIFICATIONS

Max Operating Temperature	60°C / 140°F						
Noise Reduction	35dB or more						
Oil Mist Removal	99.9% or more						
Exhaust of Oil Mist	Drain cock						
Option	Bracket*						
*Bracket not available on NAMC810 and 910							

SERIES (N)AMC EXHAUST CLEANER

- Ensures Clean Plant Air and Noise Reduction
- of distributing noise contamination
- Over 35 dB Noise Reduction
 Over 99.9% Oil Mist Removal

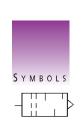



HOW TO ORDER NAMC SERIES

Model			Male	Female				
Model	NAMC310	NAMC510	NAMC610	NAMC810	NAMC910	NAMC220	NAMC320	NAMC520
Port Size NPT	3/8"	3/4"	1	1½	2	1/4"	1/4●3/8″	1/2●3/4″
Max Air Flow (Nℓ/min)	300	1,000	3,000	6,000	10,000	200	300	1,000
Effective Orifice mm² (Cv)	16 (0.88)	55 (3.1)	165 (9.2)	330 (18.3)	550 (31)	12 (0.66)	16 (0.88)	55 (3.1)
Element Model No	635321	635521	635619	635812P	635917P	63522	635321	635521
Bracket Model No	BE30	BE50	BE60	-	-	BE20	BE30	BE50



Element See "How To Order"

Bracket See "How To Order"

FOR MORE TECHNICAL INFORMATION ON THIS SERIES, PLEASE CONSULT SMC CUSTOMER SERVICE

How To Order

EXHAUST CLEANER SERIES (N)AMC

